


WQSMC

WINCHESTER DISC CONTROLLER

USER MANUAL



**WEBSTER
COMPUTER
CORPORATION**



MICHAEL LAWRENCE
TECH WRITER

WEBSTER COMPUTER CORPORATION
WQSDM Winchester Disc Controller
USER MANUAL
Version 4.0

Copyright (C) 1988 WEBSTER COMPUTER CORPORATION

1270 Ferntree Gully Road
Scoresby, Victoria 3179
Australia
(03) 764 1100 Telex 36251
Service: (03) 764 1156
FAX (03) 764 1179

163 Wharf Street
Spring Hill, Queensland 4000
Australia
(07) 832 1899
FAX (07) 832 2302

1037 North Fair Oaks Avenue
Sunnyvale, CA 94089
USA
(408) 745 0660 Telex: 172943
FAX (408) 745 1162

First Floor 9-19 Ryde Road
Pymble, New South Wales 2073
Australia
(02) 498 4422 Telex: 20801
FAX (02) 499 2147

42 Maltings Close
Baldock, Herts SG7 6NG
UK
(0462) 89 3304
FAX (0462) 89 3304

407 Great South Road
Ellerslie, Auckland
New Zealand
(9) 590249 Telex: 60871 SYSTCO
FAX (9) 593227

TABLE OF CONTENTS

INSTALLATION PROCEDURE 1

WQSMC CONTROLLER SPECIFICATIONS 2

CHAPTER 1 WQSMC GENERAL DESCRIPTION 7

CHAPTER 2 WQSMC INSTALLATION 11

 2.1 WQSMC Jumper Plug Settings and Adjustments . 11

 Base (CSR) Address 11

 Automatic Bootstrap Select 12

 Power Up Mode 12

 Interrupt Priority 13

 Removable Media 13

 2.2 KSMC/T RS232 Maintenance Terminal Adaptor . . 14

 2.3 Connecting Multiple Drives 15

 2.4 Front Panel Connections 15

 2.5 On-Board Bootstrap 17

CHAPTER 3 WQSMC WOMBAT UTILITIES 20

 3.1 Starting Up WOMBAT 20

 LSI-11 CPU 22

 MicroVAX II 22

 3.2 WOMBAT Menu Options 23

 3.3 Master Menu Options 24

 3.4 Disc Structure Menu Options 25

 3.5 Disc Test Menu 31

 3.6 Bad Block Management Menu 34

 3.7 Shadow Options Menu Option 35

 3.8 WOMBAT Disc Structure 38

 3.9 Drives with Removable Media 39

 3.10 Error Recovery Procedures 39

 3.11 Drive Shadowing 40

 3.12 Computing Sectors Per Track 41

 3.13 WOMBAT Error Messages 41

3.14	WOMBAT Self-Diagnostics	43
CHAPTER 4	WQSMD MSCP PROGRAMMING	44
4.1	Overview of MSCP	44
4.2	Controller Communications	44
4.3	Message Transmission	49
4.4	Data Transmission	50
4.5	Initialization	50
4.6	Registers	51
4.7	MSCP Commands	53
4.8	Error Handling	54
4.9	Fatal Controller Error	54
CHAPTER 5	WQSMD OPERATING SYSTEMS	56
5.1	Operating Systems Overview	56
5.2	RT-11 Operating System	58
5.3	RSTS/E Operating Systems	61
5.4	RSX-11M Operating System	62
5.5	RSX-11M-PLUS Operating System	65
5.6	MicroVAX/MicroVMS Operating System	68
5.7	Autoconfigure	70
CHAPTER 6	WQSMD CACHE OPERATION	77
6.1	WQSMD Disc Cache	77
6.2	Read Look-ahead	77
6.3	Cache Allocation	77
6.4	Cache Usage	78
6.5	Cache Assignment Algorithm	78
6.6	Cache Operation	78
6.7	Cache Disable	79
6.8	Early Write Notification	79
CHAPTER 7	WQSMD QBUS INTERFACE	80
7.1	Qbus Interface	80
7.2	Interrupts	80
7.3	Direct Memory Access	81
CHAPTER 8	WQSMD SMD INTERFACE	83
8.1	SMD Interface	83
8.2	Standard SMD Interface	85
8.3	Extended SMD Interface	86

WEBSTER COMPUTER CORPORATION
WQSMC Winchester Disc Controller

8.4	Modified SMD Interface	87
8.5	Enhanced SMD Interface	88
8.6	SMD-E Interface	89
8.7	SMD Read/Write Cable Signals	90
CHAPTER 9	WQSMC HARDWARE DESCRIPTION	91
9.1	General Description	91
9.2	Detailed Description	92
	Microprogrammed sequencer	92
	Qbus Interface	93
	SMD Interface	94
	Cache Memory	95
	I/O Port	95
CHAPTER 10	WQSMC CIRCUIT DIAGRAMS	97
APPENDIX A	SAMPLE SWITCH SETTINGS	105

TABLES

2-1	BASE (CSR) ADDRESS - CONFIGURATION PLUG (A)	11
2-2	AUTOMATIC BOOTSTRAP SELECT - CONFIGURATION PLUG (B) ...	12
2-3	POWER UP MODE - CONFIGURATION PLUGS (S1, S0)	12
2-4	INTERRUPT PRIORITY - CONFIGURATION PLUGS (P1 - P3)	13
2-5	REMOVABLE MEDIA - CONFIGURATION PLUGS (H0, H1)	14
2-6	KSMC/T RS232 MAINTENANCE TERMINAL ADAPTOR	15
2-7	10-WAY FRONT PANEL/MAINTENANCE CONNECTOR	16
2-8	CSR ADDRESS FOR WQSMC BOOTSTRAP	19
3-1	WOMBAT INITIALISATION CODES	21
3-2	WQSMC CSR ADDRESSES	21
4-1	MSCP COMMAND RING CODE DEFINITIONS	46
4-2	MSCP WORD ENVELOPE CONTENTS	48
4-3	MSCP INITIALISATION PARAMETERS	51
4-4	WQSMC INITIALISATION WORDS	52
4-5	WQSMC MSCP COMMANDS	53
4-6	FATAL CONTROLLER ERRORS	54
4-7	MSCP STATUS CODE MESSAGES	55
5-1	DEVICE NAMES IN DEC OPERATING SYSTEMS	57
5-2	SYSGEN DEVICE RANKING	71
5-3	DEVICE REGISTERS AND WORD BOUNDARIES	72
5-4	FLOATING VECTOR ADDRESS DEVICE PRIORITY RANKING	73/74
5-5	CSR AND VECTOR ADDRESS EXAMPLE	75
5-6	FLOATING CSR ADDRESS ASSIGNMENT	76
8-1	SMD STANDARD CONTROL CABLE SIGNALS	85
8-2	SMD EXTENDED CONTROL CABLE SIGNALS	86
8-3	SMD MODIFIED CONTROL CABLE SIGNALS	87
8-4	SMD ENHANCED CONTROL CABLE SIGNALS	88
8-5	SMD-E CONTROL CABLE SIGNALS.....	89
8-6	SMD READ/WRITE CABLE SIGNALS	90

FIGURES

2-1	WQSMC FACTORY JUMPER SETTINGS	17
4-1	MSCP MEMORY COMMUNICATIONS FORMAT	45
4-2	MSCP DESCRIPTOR FORMAT	45
4-3	MSCP MESSAGE ENVELOPE FORMAT	47

CONTROLLER
SPECIFICATIONS

Installation Procedure

The installation of the WQSMC is relatively simple. Before the WQSMC can be used the following procedure must be followed.

1. If you are not familiar with the WQSMC and its features, **READ** this manual's introductory chapter (Chapter 1).
2. Select the controller CSR address, power up mode, bootstrap address, media type and interrupt priority by setting the miniature plugs located on the controller. See Chapter 2 - Installation.
3. Locate the controller in the Qbus backplane and connect the drive control and data cables.
4. Power-up the system and invoke WOMBAT using one of the methods outlined in Chapter 3 - WOMBAT Utilities. WOMBAT is Webster's interactive diagnostic and formatting program. **The disc(s) cannot be used with the WQSMC until WOMBAT has structured and formatted the disc(s).** Answer the WOMBAT prompts according to the disc structure and system configuration you have selected.

When all these steps have been completed the WQSMC will be ready to use with your computer system.

WQSMC CONTROLLER SPECIFICATIONS

Bus interface	DEC Qbus
Transfer mode	Block mode DMA
Memory address capacity	4 Megabyte (22 bit)
Software emulation	DEC MSCP
Command buffer capacity	Up to 32 commands
Disc cache size	1 Megabyte (with parity)
Interrupt vector	Software selectable
Interrupt priority	Level 4 thru 7 plug selectable
Qbus loads	1 DC, 1 AC
Drive interface	CDC SMD (Standard, Modified, Enhanced, Extended, SMD-E)
Access time overhead	4 ms (plus drive access time)
Disc transfer rate	3.0 Mbyte/sec maximum (non interleaved)
Drive connectors	60 way control, 2 x 26 way data
Power requirement	5V 3.5A typical 12V 0.4A typical
Physical size	226mm x 266mm (QBus quad)
Temperature	5 - 60 degrees C. operating 0 - 66 degrees C. store
On board LED indicators	Red: Fatal error indicator Green: Access in progress
TTL outputs	Disc access in progress
TTL inputs	One write protect input per drive One online/offline input per drive
RS232 output	Data trans. to terminal - 9600 baud
RS232 input	Data rec'd from terminal - 9600 baud

Optional accessories:

LWQSMC - drive and control cable kits configured for one or two drives.

KSMD/T - RS232 Maintenance Terminal Adaptor kit.

KSMD/T RS232 Maintenance Terminal Adaptor Connections

J6 Pins	DB25S Pins	Function
7	7	RS232 Enable
8	2	RS232 Input
3	3	RS232 Output
4	7	Ground

Communication Format

ASCII RS232 9600 Baud, 7 Data Bits, 1 Stop Bit, no parity.

Base (CSR) Address - Configuration Plug (A)

ADDRESS	LSI-11	MicroVAX II
1st (A1)	17772150	20001468
2nd (A2)	17760334	200000DC
3rd (A3)	17760354	200000EC
4th (A4)	17760374	200000FC
5th (A5)	17760414	2000010C
6th (A6)	17760434	2000011C

NOTE - Only one of the above six switches should be on at any one time.

Other CSR addresses are available using option PROMs. Refer to Table 3-2.

Automatic Bootstrap Select - Configuration Plug (B)

B1	On board bootstrap disabled
B2	On board bootstrap enabled at address 17773000
B3	On board bootstrap enabled at address 17771000

Interrupt Priority - Configuration Plugs (P1-P3)

P3, P2, P1	PRIORITY
000	4
001	5
010	6
110	7

Removable Media - Configuration Plugs (H0,H1)

PLUG	VALUE
H1 (DRIVE 1)	0 - NON REMOVABLE
H1 (DRIVE 1)	1 - REMOVABLE
H0 (DRIVE 0)	0 - NON REMOVABLE
H0 (DRIVE 0)	1 - REMOVABLE

Power Up Mode - Configuration Plugs (S0,S1)

LINK NUMBER	SETTING	FUNCTION AT POWER UP
S0	0	Normal Power Up
	1	Start WOMBAT on Power Up
S1	0	Not DP8466 Rev G
	1	DP8466 Rev G

Fatal Controller Error Codes

ERROR		DESCRIPTION
octal	hex	
125413	AB0B	RAM test failed
126013	AC0B	ROM test failed
126413	AD0B	Cache test failed
127013	AE0B	Cache unlock error
127413	AF0B	Qbus error - get host message
130013	B00B	Qbus error - clear host rings
130413	B10B	Buffers ; free buffer count error
131013	B20B	Queue empty - unfork
131413	B30B	Queue empty - wait
132013	B40B	Queue empty - pause
133013	B60B	Cache parity

CSR Addresses for WQSM Bootstrap

DEVICE	ADDRESS
CONSOLE	177560
DU:	172150
DUA:	172150
DUB:	160334
DUC:	160354
DUD:	160374
DUE:	160414
DUF:	160434
DUG:	172154
DUH:	172160
DUI:	172164
DUJ:	172170
DUK:	172174
MS:	172520
MSA:	172520
MSB:	172524
MSC:	172530
MSD:	172534
MU:	174500
MUA:	174500
DL:	174400
DY:	177170

NOTE: When starting WOMBAT the letter "W" may be followed by any letter available for "DU".

Console ODT Initialisation Words

NUMBER		FUNCTION	PROCESSOR
octal	hex		
000250	00A8	WOMBAT	PDP/11
000254	00AC	WOMBAT	MicroVAX II
000260	00B0	WOMBAT	On board port

WOMBAT Error Messages

sector not found Indicates that the sector asked does not exist or cannot be located.

drive fault	Indicates that the drive is faulty and that service is necessary.
drive timed out	Indicates that the drive has failed to complete an operation.
data field error	Indicates that bad data exists in a sector.
controller fault	Indicates controller failure. Service will be necessary.
block marked as bad	Indicates that the block has been flagged as bad. The controller will refer to the RCT for a replacement block.
data late	Data is lost due to internal overflow in controller memory before transmission over the bus to host.
forced error	A forced error occurs when a good block has bad data. The block is flagged forced error until good data is written to the block.
seek error	An error has occurred on a seek operation.
rct full	The replacement control table is full. An error of this kind indicates that the disc has too many errors to be serviceable.
rct read error	Fatal error which indicates the controller cannot read the RCT.
rct write error	Fatal error which indicates the controller cannot write the location of replacement blocks.
illegal sector	A sector with an illegal number has been specified.
illegal block number	A block with an illegal number has been specified.
non-existent drive	The drive specified does not exist.
no drive selected	A drive must be selected before WOMBAT can perform any operation. Select any valid drive.
non-existent unit	The unit selected has not been defined.
structure write error	WOMBAT is unable to write the structure to the disc. This is a fatal error indicating that the drive is not serviceable.

CHAPTER ONE

GENERAL DESCRIPTION



Chapter 1 WQSMC General Description

The Webster WQSMC is a high performance quad height interface to SMD compatible disc drives. The WQSMC features a one megabyte cache memory, 24 megabit per second throughput, command queueing, overlapped seeks, and implements DEC's Mass Storage Control Protocol (MSCP).

The WQSMC flexibly couples discs of any size and data rate to all standard DEC operating systems without software modification. Comprehensive on-board interactive formatting and diagnostic firmware provides engineering support across the range of LSI-11, MicroVAX and various non DEC implementations of the Qbus.

Two SMD drives up to 3 megabytes/second transfer rate

The SMD interface is an industry standard for high capacity disc drives. There have been modifications to this standard by various manufacturers which the WQSMC supports with no software or hardware changes: Standard, Modified, Enhanced, Extended and SMD-E. Two drives of any type with transfer rates of up to 24 megabits per second (3 megabytes per second) are supported.

One Megabyte Disc Cache

All data is read from and written into the cache. Data transfers from the cache are approximately 3 ms compared to 20 - 30 ms for typical drive access times - up to an 80 percent improvement in access time.

No Sector Interleaving

The WQSMC stages all data from the disc drive through the cache memory. This ensures that all data can be transferred at full disc speed over the disc interface and at maximum speed over the Qbus with out incurring data late errors. Disc and Qbus transfers are performed simultaneously to minimise access times.

Read Look-ahead

The Webster WQSMC allows the user to program the controller to perform 'look-ahead' reads in anticipation of data requests. Whole tracks or more can be read into the cache ensuring that data is ready for the host computer the instant it is needed.

Virtual Units

The Webster WQSMC also allows the user to partition each drive into virtual units which are addressed by the host as individual drives. Each virtual unit can be any size up to the size of the entire drive with up to 16 virtual units assigned to each controller. Each virtual unit can be further partitioned under the host operating system.

Block mode DMA and DMA Throttle

When used with block mode memory, the Webster WQSMC interleaves address references with bursts of data - almost doubling Qbus throughput. The WQSMC fully conforms with Qbus Block Mode DMA protocol. With non block mode memory, the WQSMC automatically reverts to simple DMA.

After every 16 word DMA transfer there is a 4 microsecond delay to service any pending interrupt or DMA requests from other devices. If a DMA request occurs a 'DMA throttle' releases the Qbus after 8 words to prevent data loss from other DMA devices.

Drive Shadowing

The Webster WQSMC offers the user the option of drive shadowing. Data integrity is further improved by writing the same data to two drives simultaneously. In certain circumstances greater data throughput may be achieved because the controller can decide which drive has its heads positioned closest to the required data and can schedule a read on that drive.

Seek Optimisation and Overlap

The Webster WQSMC can queue up to 32 commands. The optimum order of execution is dynamically computed according to the strategy selected by the user. With multiple disc drives seeks are initiated in parallel to further improve performance.

Error Checking and Correction

The Webster WQSMC uses a 48-bit ECC polynomial with an 11-bit correction span for error detection and correction. The WQSMC will try up to 10 times to correct an error before reporting the fault to the host system.

Dynamic Bad Block Replacement

The Webster WQSMC dynamic bad block replacement and error correction always presents error free 'perfect media' to the host computer. During normal operation the controller dynamically replaces any blocks it detects as bad with an alternative block from a replacement block pool. Blocks with hard errors are replaced but the data in them flagged 'forced error'. This indicates to the host that though the data in these blocks is bad the blocks themselves are now good. All bad block replacement is completely invisible to the host computer.

Statistics Recording

The Webster WQSMC records statistics such as the number of reads and writes, cache hits and misses, and other important information for each drive. The user can interrogate the controller for this information according to application specific performance requirements.

Write Protect

A connector is provided to which the user can connect one write protect switch per drive.

MSCP Emulation

The Webster WQSMC communicates with the host through a simple register pair to memory resident 'command packets'. Disc geometry factors such as sectors, heads, cylinders and disc capacity are invisible to the host computer. The Webster WQSMC accepts 32 bit binary block numbers and converts them to physical disc addresses, allowing any size disc to be fully accessed by any program without software modification.

Supported operating systems include RT-11 version 5; RSX-11M-Plus version 2; TSX-Plus version 5; RSTS/E version 8; MicroVMS version 4; or later versions. Various UNIX versions are also supported.

Qbus Interface

Originally introduced in 1975 by Digital Equipment Corporation to support the LSI-11 CPU range, the Qbus architecture has evolved in speed and function to the point where it now outperforms most small computer bus systems. The WQSMC fully implements all current Qbus enhancements, including block mode transfers, 22 bit addressing, and fully supports LSI11/2, LSI11/23, LSI11/73 and MicroVAX II Qbus CPU designs.

On-Board WOMBAT Utilities

Webster Omnipotent Mass Builder and Tester (WOMBAT) is an interactive formatting and diagnostic utility totally contained within the WQSMD firmware. An on-board serial connection is provided for communication with an ASCII terminal, permitting disc formatting and maintenance operations to be carried out with minimal additional hardware present.

WOMBAT can also load a simple console communication program into the host computer's memory or it can be invoked on system power-up. No external software, media, or program loading device is required in maintenance of the WQSMD or its attached disc drives. WOMBAT is always available independently of the host CPU type or the operating system environment.

WOMBAT Formatter

WOMBAT initialises a fresh disc drive by writing sector addresses and a test pattern through the entire recording surface. WOMBAT prompts the user at the terminal to supply parameters such as drive geometry (cylinders, heads and sectors) and various other options. This data is stored twice in special reserved areas of track zero and retrieved by a simple homeseek-read sequence at each power-up. No special PROMs or switch settings are required to fully characterize the connected disc drives.

WOMBAT Self Diagnostics

The WQSMD contains a comprehensive set of self diagnostic procedures which are executed automatically on power-up. Failures are reported via a flashing red LED. WOMBAT examines the device registers then reports the nature of the fault to the console.

WOMBAT Interactive Diagnostics


Terminal oriented engineering utilities contained within the WOMBAT firmware include a continuous read/write/seek exerciser, a disc surface pattern tester and a bad block replacement routine.

Sequential Spin-up

The WQSMD controller will spin-up SMD drives in a sequential manner, providing they have the "motor control" option enabled. This is done to minimise start-up current surge.

CHAPTER TWO

INSTALLATION



Chapter 2
WQSMC Installation

2.1 WQSMC Jumper Plug Settings and Adjustments

The WQSMC can be configured by selecting a combination of miniature movable configuration plugs. Plug positions for base (CSR) address, automatic bootstrap select, power up mode, interrupt priority and removable media are given below.

Base (CSR) Address

TABLE 2-1 BASE (CSR) ADDRESS - CONFIGURATION PLUG (A)

ADDRESS	LSI-11	MicroVAX II
1st (A1)	17772150	20001468
2nd (A2)	17760334	200000DC
3rd (A3)	17760354	200000EC
4th (A4)	17760374	200000FC
5th (A5)	17760414	2000010C
6th (A6)	17760434	2000011C

NOTE - Only one of the above six switches should be on at any one time.

Automatic Bootstrap

The on-board bootstrap is provided to allow systems to boot from the controller. The switch settings for the bootstrap are given below. The bootstrap procedure is given in Section 2.5. The bootstrap must be disabled before being installed in a MicroVAX.

Automatic Bootstrap Select

TABLE 2-2 AUTOMATIC BOOTSTRAP SELECT - CONFIGURATION PLUG (B)

POSITION	FUNCTION
B1	On board bootstrap disabled
B2	On board bootstrap enabled at address 17773000
B3	On board bootstrap enabled at address 17771000

POWER UP MODE

This feature is used in combination with the automatic bootstrap. If the bootstrap is enabled the appropriate power up mode must be selected. Power up mode (SW3) set "OFF" is selected to run WOMBAT when the system is booted. This feature does not apply to the MicroVAX II.

TABLE 2-3 POWER UP MODE - CONFIGURATION PLUGS (S1,S0)

LINK NUMBER	SETTING	FUNCTION AT POWER UP
S0	0	Normal Power Up
	1	Start WOMBAT on Power Up
S1	0	Not DP8466 Rev G
	1	DP8466 Rev G

As can be seen above, there is a link to select the revision of the DP8466 controller chip. This switch is set correctly at the factory, but sometimes the board may be converted from a -12 or -20 to -25, or some other combination by changing the DP8466. If this occurs,

the revision of DP8466 may change. In this case, the following will help to identify the DP8466 revision.

WQSMD BOARDS PRIOR TO SERIAL NUMBER 901435 CAN NOT SUPPORT THE DP8466-25. FIELD UPGRADE IS NOT POSSIBLE.

Any DP8466 that has 'ENGINEERING' stamped on it is not 'REV G'.

Disc controller chips labelled DP8466A, and that have no 'ENGINEERING' stamp, are 'REV G' versions of the DP8466.

Note that the revision of the controller chip is NOT dependent on the speed at which the chip is rated.

INTERRUPT PRIORITY

Interrupts suspend program execution while the processor starts the device service routine at a vector address input from the requesting device.

Interrupts are serviced according to device priority. Device priority can be determined in two ways. These are termed 'Position Defined' and 'Distributed' arbitration. Positioned Defined arbitration gives priority to those devices which are electrically closest to the processor. Distributed arbitration implements priority according to the priority levels set on the device hardware. When devices with equal priority generate an interrupt, the processor gives preference to the device which is electrically closest. A previous bus transaction must have been completed before another can be commenced.

TABLE 2-4 INTERRUPT PRIORITY - CONFIGURATION PLUGS (P1-P3)

P3, P2, P1,	PRIORITY LEVEL
000	4
001	5
010	6
110	7

Removable Media

TABLE 2-5 REMOVABLE MEDIA - CONFIGURATION PLUGS (H0,H1)

PLUG	VALUE
H1 (DRIVE 1)	0 - NON REMOVABLE
H1 (DRIVE 1)	1 - REMOVABLE
H0 (DRIVE 0)	0 - NON REMOVABLE
H0 (DRIVE 0)	1 - REMOVABLE

2.2 KSMD/T RS232 Maintenance Terminal Adaptor

The KSMD/T RS232 maintenance terminal adaptor allows the controller to be connected to an ASCII terminal. It consists of a 10-way flat cable with a DB25S connector on one end and a 10-way insulation displacement type flat cable socket on the other.

The communication format is :

ASCII RS232 9600 Baud, 7 Data Bits, 1 Stop Bit, no parity.

Note that for a VT220 terminal the communication format requires space parity.

If normal disc access is attempted with this cable connected to a terminal, garbage will appear on the terminal due to the shared RS232 Output/Access Light Function. This is normal.

TABLE 2-6 KSMD/T RS232 MAINTENANCE TERMINAL ADAPTOR

J6 Pins	DB25S Pins	Function
7	7	RS232 Enable
8	2	RS232 Input
3	3	RS232 Output
4	7	Ground

2.3 Connecting Multiple Drives

The WQSMC can simultaneously two SMD drives which can be of different size, speed and data rate. The procedure for connecting two drives is simple. Data cables are connected in radial fashion to edge connectors on the WQSMC. There is no particular order of connection. The control cable is daisy chained between each drive with the last drive being terminated.

Pre-configured data and control cable kits for one or two drives can be supplied to minimise difficulties when installing the WQSMC or where adding additional drives. (LWQSMC/1 or LWQSMC/2)

Cables should be checked for correct installation by ensuring that Pin 1 on the edge connector aligns with Pin 1 on the cable. Pin 1 is generally indicated by the arrow mark on the edge connector shroud. If there is no shroud Pin 1 is the top right pin with the edge connectors facing you. Pin 1 on the cable is usually indicated by a coloured stripe on the appropriate cable.

Correct drive termination is also necessary. The disc drive technical literature should be consulted for the appropriate termination procedure.


2.4 Front Panel Connections

If required, a front panel can be connected to J4, the front panel/maintenance connector. There are three possible options for the front panel - an active panel, a passive panel or no panel. The active front panel provides write protection for all drives, an online/offline button and a drive ready indicator.

TABLE 2-7 PASSIVE 10-WAY FRONT PANEL/MAINTENANCE CONNECTOR

Pin No.	Front Panel Function	Maintenance Function
7	Drive 1 Write Protect Input Connecting this input to Ground will write-protect the drive. Has an on-board 180 ohm pull-up.	RS232 Enable
8	Drive 0 Write Protect Input Connecting this input to Ground will write-protect the drive. Has an on-board 22k ohm pull-up.	RS232 Input
1	Drive 1 Online/Offline Switch Input Connecting this input to Ground will prevent access to the drive. Has an on-board 180 ohm pull-up.	
10	Drive 0 Online/Offline Switch Input Connecting this input to Ground will prevent access to the drive. Has an on-board 180 ohm pull-up.	
3	Access Light. Indicating access to Drive 0, Drive 1 or Cache. This output can be used to drive an access light. The levels are : ACCESS -5 v through 1.5k ohm NO ACCESS : +4.5 @ 20mA max.	RS232 Output Data
5	TTL signal indicating access to Drive 0. Low true.	
6	TTL signal indicating access to Drive 1. Low true.	
2,4,9	Ground	Ground

FIGURE 2-1 WQSMD FACTORY JUMPER SETTINGS

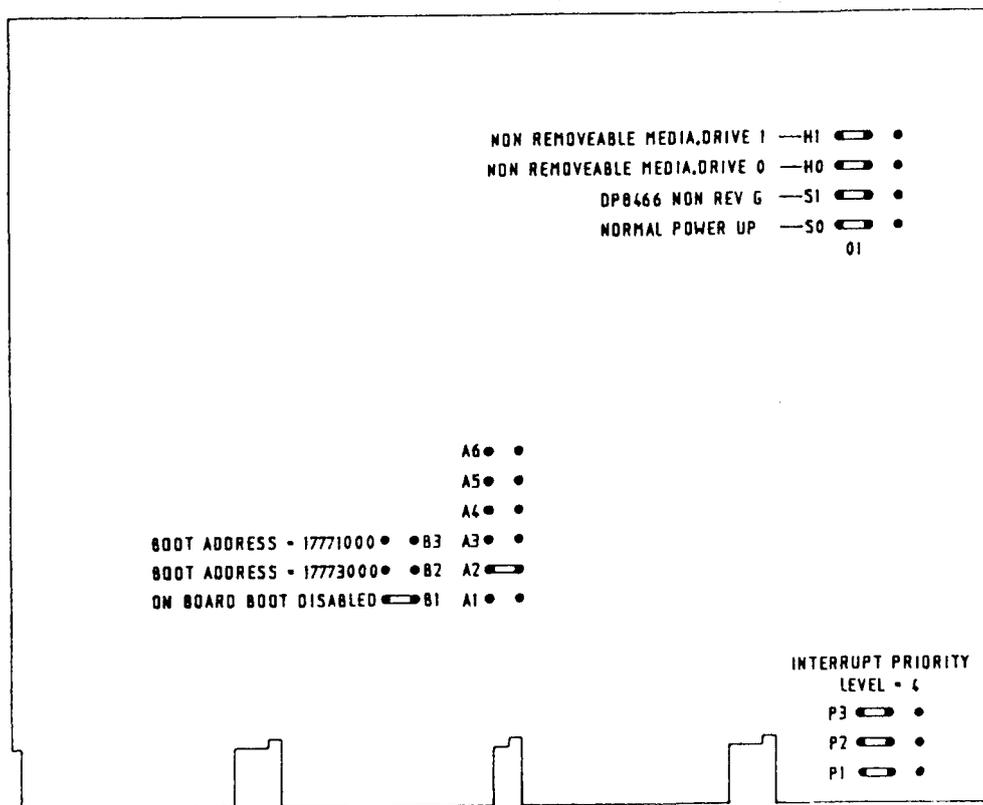

2.5 On-Board Bootstrap (LSI-11 only)

If the WQSMD bootstrap is enabled the following occurs :-

1. On initialisation location 773000 responds to the CPU fetch instruction with a BR .+2 (400) instruction to address 773002 where the CPU loops (BR . (777)).
2. A "jump to zero" instruction (JMP @#0) is loaded into location zero.
3. The controller program forces the CPU to start executing at location zero by changing the contents of location 773002 to "CLR PC".
4. Bootstrap code is loaded into host memory at location 2000 and the rest of memory is cleared.
5. The controller changes location 2 from zero to 2000 changing the JMP @#0 to JMP @#2000, starting the execution of the loaded bootstrap program and the following message is typed :-.

BOOT V2.0.

6. The controller boot program allows approximately 2 seconds for the operator to strike any key on the keyboard. If no key is struck the boot types :-

Booting from DU0:

The bootstrap program reads in that device's boot block starting at location zero.

7. If any key is struck by the operator within two seconds the boot prompts with :-

>

The operator may then key in a device DU, DL, DY, MS or W. Note that device W will invoke WOMBAT. By further specifying A, B, C, D, E or F after W, WOMBAT on controller A, B, C, D, E or F will be invoked. For example, WB will invoke WOMBAT on controller B.

The following is the syntax of the WQSMD bootstrap procedure :-

> [DEVICE] -- [Controller Number] -- [Unit Number] --[:]

such that :-

```
  -->DU - [A,B,C,D,E,F]-[0-7] ---- [:]
  ^
  |->DL ----- [0-7] --|
  |
  |->DY ----- [0-1] --|
  |
  |->W ----- [A,B,C] -----|
  |
  -->MS --- [A,B,C,D] -----
```

8. If any error occurs, a message from the following set is printed and the boot re-prompts for step five.

"? - Device must be DU, DY,DL or MS"

"Unit must be 0 - 7" - For DU or DL

"Unit must be 0 or 1" - For DY

"Controller must be A, B or C" - For DL

"Controller must be A, B, C or D" - For MS

"Boot failure" - Device unavailable (or not ready if DL)

9. The selected controller is commanded to read the boot block (block zero) from the specified device into the host memory and then waits to be initialised. The host computer commences execution of the instructions in the boot block. The devices "assumed" by the WQSMD bootstrap are detailed in Table 2-8.


TABLE 2-8 CSR ADDRESSES FOR WQSMD BOOTSTRAP

DEVICE	ADDRESS
CONSOLE	177560
DU:	172150
DUA:	172150
DUB:	160334
DUC:	160354
DUD:	160374
DUE:	160414
DUF:	160434
DUG:	172154
DUH:	172160
DUI:	172164
DUJ:	172170
DUK:	172174
MS:	172520
MSA:	172520
MSB:	172524
MSC:	172530
MSD:	172534
MU:	174500
MUA:	174500
DL:	174400
DY:	177170

NOTE: When starting WOMBAT the letter "W" may be followed by any letter available for "DU".

CHAPTER THREE

WOMBAT UTILITIES



Chapter 3 WQSMD WOMBAT Utilities

3.1 Starting Up WOMBAT

WOMBAT (Webster Omnipotent Mass Builder and Tester) provides a controller resident means of formatting, testing and maintaining the drive and controller subsystem. All WOMBAT functions are menu driven and are designed to simplify the process of structuring, formatting and testing drives.

WOMBAT can be invoked using any of the following four methods :-

- (a) By selecting the 'W' option during the system bootstrap operation if the WQSMD boot is enabled. The letter "W" may be followed by any letter allowed for "DU" to use any of the available CSRs.
- (b) By connecting a 9600 baud terminal to the WQSMD Front Panel connection and depositing the appropriate data pattern using ODT.
- (c) By connecting a 9600 baud terminal to the WQSMD and configuring the switches on the PCB to automatically run WOMBAT.
- (d) By depositing a special data pattern in the WQSMD using Micro ODT from the system console.

Selecting option (a) or (d) allows disc testing and diagnostics to be undertaken from the user console. The console link is formed by a communication program which WOMBAT downloads into main memory.

WOMBAT can be run independently of, or without a CPU for controller testing or engineering purposes if necessary. First disable the controller bootstrap by setting switch B1, (SW3) to ON and the power up mode (SW3) set "OFF". (See Table 2-3). Connect a 9600 baud terminal to the Front Panel connector and position the controller in the backplane. WOMBAT will be invoked automatically on power-up or by pressing reset. If no CPU is present then the backplane must be correctly terminated and a bus intialisation signal (BINIT) must be generated.

To resume normal operation the configuration switches must be reset as required. Note that setting the power up mode "OFF" will make the controller completely unavailable to the host CPU.

Table 3-1 lists the octal codes used to invoke WOMBAT using console ODT.

TABLE 3-1 WOMBAT INITIALISATION CODES

	NUMBER		FUNCTION	PROCESSOR
	octal	hex		
	000250	00A8	WOMBAT	LSI-11
	000254	00AC	WOMBAT	MicroVAX II
	000260	00B0	WOMBAT	On board port

The procedures for invoking WOMBAT on LSI-11, and the MicroVAX II are given below. WOMBAT can be stopped by simply re-booting the system. In each case input the appropriate CSR address for the controller to be accessed where indicated by 'CSR'. Table 3-2 lists the possible CSR addresses for the WQSMD.

TABLE 3-2 WQSMD CSR ADDRESSES

ADDRESS	LSI-11	MicroVAX II
<u>WCSR0</u>		
1st (A1) SW10 - ON	172150	20001468
2nd (A2) SW9 - ON	160334	200000DC
3rd (A3) SW8 - ON	160354	200000EC
4th (A4) SW7 - ON	160374	200000FC
5th (A5) SW6 - ON	160414	2000010C
6th (A6) SW5 - ON	160434	2000011C
<u>WCSR1</u>		
1st (A1) SW10 - ON	172150	20001468
2nd (A2) SW9 - ON	160334	200000DC
3rd (A3) SW8 - ON	160360	200000F0
4th (A4) SW7 - ON	160364	200000F4
5th (A5) SW6 - ON	160370	200000F8
6th (A6) SW5 - ON	160374	200000FC
<u>WCSR2</u>		
1st (A1) SW10 - ON	172150	20001468
2nd (A2) SW9 - ON	166334	20000CDC
3rd (A3) SW8 - ON	166354	20000CEC
4th (A4) SW7 - ON	166374	20000CFC
5th (A5) SW6 - ON	166414	20000DOC
6th (A6) SW5 - ON	166434	20000D1C

.....Continued

TABLE 3-2 WQSMC CSR ADDRESSES

ADDRESS	LSI-11	MicroVAX II
WCSR3		
1st (A1) SW10 - ON	172150	20001468
2nd (A2) SW9 - ON	160334	200000DC
3rd (A3) SW8 - ON	160340	200000E0
4th (A4) SW7 - ON	160344	200000E4
5th (A5) SW6 - ON	160350	200000E8
6th (A6) SW5 - ON	160354	200000EC
WCSR4		
1st (A1) SW10 - ON	172150	20001468
2nd (A2) SW9 - ON	172154	2000146C
3rd (A3) SW8 - ON	172160	20001470
4th (A4) SW7 - ON	172164	20001474
5th (A5) SW6 - ON	172170	20001478
6th (A6) SW5 - ON	172174	2000147C

NOTE: The standard CSR options come with the WCSR0 PROM. Other CSRs can be obtained by ordering any of the optional address PROMS listed.

WCSR4 PROM supported by version 2.4 (or later) firmware only.

LSI-11 CPU

The following details the procedure for invoking WOMBAT on an LSI-11 CPU system using console ODT.

Halt the processor.

'CSR' /	000000	250	(ask WOMBAT to load the communications program)
R7 /	XXXXXX	2000	(set up the program start address)
RS /	000000	340	(set PSW to block interrupts)
P			(now start the program without a bus reset.)

MicroVAX II

The following details the procedure for invoking WOMBAT in a MicroVax II using ODT.

Halt the CPU at the end of its start-up diagnostics by turning on the "halt enable" switch at the back of the CPU.

When it halts :-

D/P/W	20001F40	20	(enable QBUS access to memory)
D/L	20088008	80000002	(set-up the appropriate QBUS map entry)
D/W	'CSR'	AC	(ask WOMBAT to load the communications program into memory)
S	400		(start the program)

3.2 WOMBAT Menu Options

When WOMBAT is invoked it will display an announcement and then print a list of all drives and units and prompts for the drive number on which to perform operations.

WQSMD WOMBAT Version: 2.3

UNIT	DRIVE	OFFSET	SIZE	WRITE	STATUS
0	0	34	20000	LATE	AVAIL

DRIVE	CYLS	HEADS	SECTORS	BLOCKS	MTYPE	OPT	FAIR	STATUS
0	1224	5	34	291312	FIXED	NONE	24	SPUN UP

Drive number :

Enter the drive number (zero on a single-drive system). WOMBAT will then display the Master Menu options.

**** Master Menu ****

- 1 Structure Disc
- 2 Test Disc
- 3 Manage bad blocks
- 4 Display error
- 5 Shadow options

Select an option by typing the option number followed by RETURN. Options 1 through 3 and 5 will provide sub menus while option 4 displays the last controller detected fatal error. To return to the master menu from a sub menu type RETURN.

To exit from the master menu to the announcement (to select a different drive) type RETURN. WOMBAT will not allow you to do this before verifying whether the disc structure data has been written to disc. 'NO' is the default value.

3.3 Master Menu Options

Option 1 - Structure Disc

Selecting this option causes a sub menu to be displayed as follows:

```
** Disc Structure Menu **  
  
1   Create Disc Structure  
2   Format Disc  
3   Write Disc Structure  
4   Update Header Blocks  
5   Display Disc Structure  
6   Change Unit number  
7   Display Statistics
```

Option 2 - Test Disc

Selecting this option causes a sub menu to be displayed as follows:

```
** Disc Test Menu **  
  
( ! means all data on Disc destroyed )  
  
1   Read All Disc (preserves all data)  
2   ! Write Disc !  
3   ! Pattern Test !  
4   ! Random Writes !  
5   ECC Validation  
6   Read Physical Block  
7   Display Error Statistics  
8   Zero Error Statistics  
9   Test Cache, RAM & ROM
```

Option 3 - Manage Bad Blocks

Selecting this option causes a sub menu to be displayed as follows:

```
** Bad Block Management Menu **  
  
1   Manually Replace Bad Block  
2   Automatically Replace Bad Blocks  
3   Display Replaced Bad Blocks  
4   Enter defect map
```

Option 4 - Display Error

Selecting this option causes WOMBAT to display a message which explains the most recent controller detected fatal error. Refer to Table 4-6. The occurrence of an error is indicated by the controller hanging with its red LED flashing. If no error has occurred this option produces a meaningless error message.

Option 5 - Shadow Options

Selecting this option causes a sub menu to be displayed as follows:

Shadow options menu

- 1 Shadow copy option
- 2 Set shadow units
- 3 Reset shadow units
- 4 Copy unit to unit
- 5 Compare unit to unit

Setting Up a New Disc

The procedure for structuring a new disc is as follows:

- 1 Create disc structure
- 2 Format the disc
- 3 Pattern test the disc
- 4 Replace bad blocks

Once these 4 steps have been undertaken the host operating system may use the disc.

3.4 Disc Structure Menu Options

** Disc Structure Menu **

- 1 Create Disc Structure
- 2 Format Disc
- 3 Write Disc Structure
- 4 Update Header Blocks
- 5 Display Disc Structure
- 6 Change Unit number
- 7 Display Statistics

Option 1 - Create Disc Structure

The Create Disc Structure option must be performed when a new disc is connected to the WQSMD. This allows the various disc geometry, controller wide tuning parameters and virtual unit structure to be specified. The virtual unit structure allows a single large drive appear to the host operating system as multiple drives.

This option enters an interactive question and answer dialogue which specifies the disc structure. WOMBAT displays either the current or the default value for a parameter and gives you the option of accepting or changing it to a new value. To accept the displayed value, hit RETURN. To change it, type in the new value followed by RETURN. If WOMBAT detects improper values it will issue a warning.

The create disc structure dialogue is divided into three parts.

- (a) The drive structure specification, which describes the physical geometry of the drive.
- (b) The unit structure specification, which is executed once for each virtual unit defined where the size of each unit and unit specific parameters is described.
- (c) The controller wide tuning parameters, where read lookahead and command queue size are specified.

Drive Structure Specification

- Cylinders:** The number of cylinders on the drive.
- Heads:** The number of heads on the drive.
- Full sectors/track:** Hard sectored drives report the correct value here. For soft sectored drives, the required value will have to be computed and entered. See section 3.12 - Computing Sectors Per Track.
- Track spiralling:** Track spiralling improves disc performance on data transfers over more than one track. Sector zero on each track is offset by a nominated factor to allow head select and positioning before sector zero on the next track is reached. The recommended factor is four. Note that the Track Spiralling factor must not be changed after the disc is formatted. If it is changed, incorrect bad block replacement will occur. If you wish to try a different Track Spiralling factor to that which the disc is currently formatted, then the disc MUST be reformatted with the new Track Spiralling factor.

Interface type: Enter the correct value for the SMD interface type being used. It is possible to have a different SMD interface for each drive connected to the controller.

The values are:

- 0 - Standard
- 1 - Modified
- 2 - Enhanced
- 3 - Extended
- 4 - SMD-E

Optimisation: The seek optimisation strategy can be either:

0 (None) - No optimisation done. First request found executed. This may not be the next sequential request.

1 (Nearest) - Selects request that is closest to the to the current cylinder.

2 (Elevator) - Processes requests as it moves in one direction along the disc until it reaches the last request in that direction. This means that "Elevator" favours the centre of the disc, as it passes it twice as often as the periphery.

3 (Forward) - This processes requests from the lowest cylinder number to the highest in one direction only.

Note that optimisation is only effective if the host operating system supports multiple accesses. RT-11 and TSX plus do not support optimisation without a special device handler.

Fairness count: The fairness count determines the number of times an I/O request will be passed over by the controller's seek optimisation setting before it is executed. A reasonable count for normal use would be around 25. Every time a request is passed over its fairness count is decremented. When that count reaches zero that request will be selected, no matter what optimisation strategy is in effect. This count has no effect if no optimisation is selected.

This completes the drive structure specification. WOMBAT next prompts for a unit number. Type the unit number of the next unit to be defined, then hit RETURN. When the unit is completely defined,

WOMBAT will again prompt for a unit number. If there are no more units to define hit RETURN. WOMBAT will then proceed to the controller wide parameter definition. Note that if no units are defined, the operating system will not see anything attached to the controller.

Unit Structure Specification

- Unit size:** If an existing unit number is specified WOMBAT will display its size in blocks. If a new unit number is specified WOMBAT will display the size in blocks of the first unallocated disc area it finds beginning at the start of the disc. On a new disc this will be the entire user area. This can be changed to a smaller value if necessary. To delete an existing unit, specify zero for this field.
- Media type:** This field is displayed by some operating systems when you enquire about the type of drive. As a part of unit status when a "Get Unit Status" command is issued the MSCP protocol returns a 5 character media type. The first two characters must be 'DU'- for example - DURD54. To change this enter 1 to 5 alphabetic characters and 2 digits, e.g. RD52, to emulate DEC's 31 megabyte Winchester. For example, RSX-11M-PLUS responds to a "DEV DU:" command with : "DU0: Public Mounted Loaded Label = RSX11MPBL15 Type = RA81"
- Serial number:** The MSCP protocol returns a 32-bit volume serial number as a part of its response when an "on-line" command is issued. WOMBAT defaults this field to zero. To change this enter the desired serial number. This field is used, for example, by RSX-11M-PLUS, when a disc is initialized with the "INI DU:" command. It sets up the volume serial number.
- Host write confirmation:** This specifies if the controller is to notify the host that a write request has been completed. Enter 1 if the host is to be notified when the data is in the cache. The data will be written to the disc later. Enter 2 if the host is to be notified when the data has actually been written to the disc.

This completes the unit structure definition. Now WOMBAT enters the final part of the dialogue which specifies the controller wide tuning parameters.

Controller Wide Tuning Parameters

- Read lookahead:** This is a feature of the cache which allows the controller to read a specified number of sectors in addition to those requested by the host. Enter the minimum number of blocks you wish the controller to read for any request. For example if a value of 4 is specified when the host asks for a single block to be read, the next 3 blocks will automatically be read into the cache. If the host subsequently asks for one of these 3 blocks then the request can be honoured immediately from cache. If the host requests a transfer equal to or larger than the read lookahead size then this parameter will have no effect.
- Cache enable:** This parameter enables or disables the cache. A value of 0 disables the cache and a value of 1 enables the cache. The cache cannot be selectively enabled or disabled for a particular drive or unit number.
- Command queue:** This parameter allows you to specify the number of commands the controller can stack. The controller will then attempt to optimise the order in which they are executed. Large command queue stacks incur considerable overhead and will degrade controller performance. Note also that some operating systems (RSX-11M-Plus 2.1B is a good example) have a maximum limit for the size of the stack. The default size [8.] is a good compromise and is acceptable to most operating systems.

Front Panel Type: This option allows the correct selection of front panel type. See 2.4 Front Panel Connections.

- 0 - None
- 1 - Passive
- 2 - Active

Note with version 2.4 (or later) firmware the front panel type is set to a default of 0 (none). Earlier firmware versions are default 1 (passive).

This completes the disc structure definition. WOMBAT now checks the tables for consistency and returns to the disc structure menu.

Option 2 - Format Disc

WOMBAT asks you to confirm this drastic action as it will destroy ALL data that resides on the disc. WOMBAT will then initiate a two pass formatting operation. During the first pass WOMBAT creates all the sectors on the disc, write a sector headers which contain the sector number, the head number, and the cylinder number, as well as preambles and sync bytes, followed by a 2 byte data field. During the second pass WOMBAT writes a test pattern to each sector, preparing the disc for read testing. WOMBAT then writes the disc structure onto the reserved areas.

Option 3 - Write Disc Structure

WOMBAT will ask you to confirm this drastic action as any existing disc structure will be destroyed. WOMBAT will then write the new structure onto special reserved areas of track zero. The data is recorded twice for improved recoverability. A total of 6 blocks is written on track zero. After the structure has been written, the drive's replacement block table is zeroed. If there were any replaced blocks recorded there, they will be lost. However they will still be marked as replaced and will generate hard errors during a read operation.

Option 4 - Update Header Blocks

This is similar to Write disc structure except that the replacement block table is not written, thus preserving any blocks which may have been replaced.

Option 5 - Display Disc Structure

WOMBAT displays the structure of the currently selected drive in a form similar to the create disc structure dialogue. This is useful for checking that the newly created structure is correct.

Option 6 - Change Unit Number

It is sometimes necessary to change a unit number in order to resolve a duplicate unit number or to satisfy operating system requirements. This method is a safe and simple way of doing so. WOMBAT prompts for a unit number on the current drive, and then for the new number for that unit.

Option 7 - Display Statistics

Statistics about disc and cache usage are maintained, and recorded on the disc once per 1000 disc accesses. They are displayed as :

Controller statistics report

# of commands	xxxx		
# of reads	xxxx	# of cache hits	xxxx (xxx%)
# of writes	xxxx		

Drive statistics report

Drive #	Soft errors	Re-vectors	Blocks replaced
xxx	xxxx	xxxx	xxxx
Drive #	Seek distance	# of seeks	Seek errors
xxx	xxxx	xxxx	xxxx

Commands is the number of MSCP commands issued.
Re-vectors is the number of accesses to replaced blocks.
Seek distance is the total seek distance, in cylinders.
Blocks replaced is the number of blocks dynamically replaced by the controller during normal operation, rather than through WOMBAT.

Reset Counters is then asked. "Y" will reset them to zero.

3.5 Disc Test Menu Options

A disc can be tested after it has been formatted and before the structure is written to it. Testing does not overwrite the HDR or RCT blocks. The disc structure must be written to the disc before bad blocks can be replaced.

All tests continue indefinitely until aborted by one of the following methods:

1. If an RS232 serial port terminal is attached to the controller, press BREAK.
2. If WOMBAT is running from the Console terminal, type CTRL/C.

When a test is aborted the Test Disc Menu options are returned. If tests are run from an RS232 terminal attached to the controller, beware of system activity on the host computer as Qbus initializations will cause the disc controller firmware to re-initialize and so leave WOMBAT.

All tests give 10 retries on an error, reporting every error by displaying the block number and an error code.

**** Disc Test Menu ****

(! means all data on Disc destroyed)

- 1 Read All Disc (preserves all data)
- 2 ! Write Disc !
- 3 ! Pattern Test !
- 4 ! Random Writes !
- 5 ECC Validation
- 6 Read Physical Block
- 7 Display Error Statistics
- 8 Zero Error Statistics
- 9 Test Cache, RAM & ROM

Option 1 - Read All Disc

This test reports any read errors. Successful operation will be reported in the following format:

Pass: 1. Errors: 0.
Pass: 2. Errors: 0.

This function does not destroy any information.

Option 2 - Write Disc

This test reports any write errors while writing a test pattern to the whole disc. ALL INFORMATION on the disc, excepting HDR and RCT blocks, is DESTROYED. Errors are displayed in the standard format:

```
Block: 32040      (Error message)
Pass:1. Errors: 1.
Pass:2. Errors: 1.
```

The displayed error count is cumulative until the test is terminated.

Option 3 - Pattern Test

A test pattern is written to each block. WOMBAT does one write and 10 read passes. This test reports any errors in the standard format as shown above.

Option 4 - Random Writes

This test writes 5000 blocks at random locations in the user area of the disc. It then reads the entire disc to determine if any of the writes caused an error. This test is designed to test the head positioning and selecting logic of the drive.

Option 5 - ECC Validation

The ECC test uses a special reserved block on track zero for testing. It first proves that it can successfully correct an 11 bit error and then proves that it cannot correct a 12 bit error. This test checks the ECC logic within the WQSMD.

Option 6 - Read Physical Block

WOMBAT prompts for a block number anywhere on the disc. It then converts that block number into a physical address consisting of cylinder, head, and sector, and displays these values. Then it reads that sector and displays a message indicating the success or failure of the read.

Option 7 - Display Error Statistics

Displays the error statistics gathered by any of the above disc testing options in the following format:

```
** Error Statistics **
Block   Number (of errors)
32040   1.
Blocks in error: 1.
```

Option 8 - Zero Error Statistics

Zeroes the error statistics table & redisplayes Test Menu options.

Option 9 - Test Cache, RAM & ROM Option

CAUTION

Execution of the Test Cache option causes drive table parameters stored in RAM to be destroyed. Drive error statistics will also be lost.

This test continuously writes test patterns throughout the entire cache and reads them back testing for veracity. A separate part of the test automatically checks that the parity logic is functioning correctly by forcing incorrect parity and checking that an error occurred. The cache pattern tests use special microcode instructions which iteratively read and write large blocks of cache memory at high speed. The Static RAM at L5 is also tested and the code PROM is Checksummed.

With version 2.4 (or later) firmware the Test Cache option also reports the size of onboard cache memory and the location of any failed memory.

3.6 Bad Block Management Menu Options

** Bad Block Management Menu **

- 1 Manually Replace Bad Block
- 2 Automatically Replace Bad Blocks
- 3 Display Replaced Bad Blocks
- 4 Enter defect map

Option 1 - Manually Replace Bad Blocks

WOMBAT prompts for a block number within the user area of the disc. Then it marks the specified block as bad and allocates a replacement block for it.

Option 2 - Automatically Replace Bad Blocks

WOMBAT searches the error statistics table, which is compiled by the read, write, and pattern tests, for blocks whose error count exceeds three. Any such blocks are marked as bad on the disc and replacement blocks are allocated for them.

Option 3 - Display Replaced Bad Blocks

WOMBAT reads the Replacement Control Table and displays the logical block numbers of any blocks recorded there.

Option 4 - Enter Defect Map

This option prompts for the drive manufacturer's defect map information as follows :

Enter defect map for drive n

Enter all values in decimal

Bytes per sector: The number of bytes per sector as set up in the drive switches (hard sector drives), or calculated by following the procedure in section 3.12 Computing Sectors per Track.

Cylinder: Cylinder number of defect, RETURN or ^C if no more.

Head: Head number of defect.

Bytes past index: Location past index of defect.

Bit length of defect: Length of defect in BITS.

This data is then used to compute the address of a block on the disc. If it does not match a block on the specified disc track the error message "!! Beyond last sector" is produced. This may mean that the defect is located beyond the last data sector on the track, or that the entered data was wrong. WOMBAT then calculates the block number, displays it and replaces it. The "Cylinder:" prompt is then repeated.

3.7 Shadow Options Menu Option

This feature shadows, i.e. keeps two copies, of a 'logical unit'. When the disc controller and drives are first powered up, any unit (and a physical disc may be broken up into a number of 'logical units') that is shadowed has its contents copied to its shadow unit. Thereafter any update of that unit will cause the controller to update the shadow unit as well. When reading from a shadowed unit, the drive with its heads nearest the required data is used. This helps to keep the drive shadowing overhead down, although in normal circumstances, with writes consisting about 10% of reads, there is a performance penalty.

Shadowing consists of two operations: the initial copy of the entire primary unit to the shadow unit; and then the updating of both primary and shadow units on every disc write. Updating of both copies takes place as a matter of course, while the initial copying can happen at various times depending on the 'Shadow copy option' selected.

The main reason for drive shadowing is RELIABILITY. When reading, any error detected will cause the controller to use the data on the other drive. This means that, besides the controller having extensive error recovery facilities, there is a redundant backup of all data on the shadowed unit without any user programming or operating system overhead.

Drive shadowing is completely controlled from the 'Shadow options' menu.

Shadow options menu

- 1 Shadow copy option
- 2 Set shadow units
- 3 Reset shadow units
- 4 Copy unit to unit
- 5 Compare unit to unit

Option 1 - Shadow Copy Options

The first step is to select how the unit (the 'Primary unit') is to be copied to its 'Shadow unit'. There are 4 options :

- | | |
|---------------------------------|---|
| 0 - WOMBAT Only | This is the default. With this selected the primary is only copied to its shadow when you invoke it in the Copy Unit to Unit option. |
| 1 - On power up | This causes the copying to be done whenever the drive(s) are first powered up, or WOMBAT has been invoked. |
| 2 - Not ready/ready | The copying is to be done whenever the controller detects the shadow unit going from a not ready to ready condition - e.g. a removable drive being brought on-line. |
| 3 - Power up or Not ready/ready | A combination of 1 and 2 above. |

The use of copy type 0 only is recommended at this time. It is considered that the other options have too high a probability of copying bad data from the primary unit over good backup data on the shadow unit.

Option 2 - Set Shadow Units

Shadow units are logically connected to primary units by this option which asks :

Primary unit: The unit to be shadowed.

Shadow unit: The unit number of the shadow.

The shadow unit will not be available to any operating system as it appears as 'unit undefined'. It must be EXACTLY the same size as the primary unit.

Now copy the primary to its shadow by using the **Copy unit to unit** option.

You may shadow a unit on the same physical drive, though you lose both reliability, by having the data on only one drive, and performance, by having the disc heads move to write all data twice.

If you have selected a shadow copy type of 1 or 3, whenever the controller is powered up and its first 'MSCP Initialize' sequence executed for the primary unit (the unit you wanted shadowed), the contents of this unit are copied to its shadow, or if WOMBAT has been invoked. The time this takes obviously depends upon the number of blocks on the unit, but we have found that a third of a megabyte per second is a good guide. While this is happening user I/O may take place, but will be made slower by the 'shadow copy' taking place.

WARNING:- a potentially serious problem exists with the automatic copy of data from the primary to the shadow at power up (shadow copy types 1 or 3). If the primary has been corrupted, or the data is invalid, IT WILL DESTROY YOUR BACKUP. If you have trouble with your primary unit use WOMBAT to change it from a shadow primary. You may even want to change its unit number via the 'Change Unit number' option, and then bring in the shadow unit as its replacement. Please realize that the controller MUST assume the validity of the primary unit at the first initialization after power up if you have selected one of the power up copy types.

Option 3 - Reset shadow units

This option allows disabling of an assigned shadow unit :

Primary unit: The primary unit.

Shadow unit: The unit number of the shadow to be disconnected from the primary.

This shadow unit will now be available to the operating system.

Option 4 - Copy Unit To Unit

To copy a primary unit to its shadow :

Primary unit The number of the unit you want copied.

Shadow unit The unit you want the data copied to.

The copy will take place. Data is transferred at about twenty megabytes a minute.

Option 5 - Compare Unit to Unit

This option allows the comparison of the data on a primary and a shadow unit.

Primary unit One of the units.

Shadow unit The other.

If any data errors or data compare mismatch is found, the block number and type of error will be reported. The comparison proceeds at about two megabytes a minute.

3.8 WOMBAT Disc Structure

WOMBAT records the logical structure of the drive on track 0. All of track 0 is reserved for this and other testing purposes. The user area begins at the next block after track 0. This is the same as the number of sectors per track. The user area extends to the block before the beginning of the Replacement Control Table (RCT). The size of the RCT is fixed and is always 2 tracks. The 2 tracks are accessed by different heads and contain identical data. All the blocks from the end of the second RCT track to the end of the media are reserved for replacement blocks.

The disc area reserved for RCT and replacement blocks is always an integral number of cylinders. The number of cylinders required is always computed from the total number of cylinders on the drive. This reserves a constant proportion of the media for replacement blocks. The amount reserved is approximately 0.1% of the total formatted capacity. Option 4 of the master menu will report the formatted capacity of each drive. You can determine the user area easily. It will be reported as the size of the first unit configured on that drive. If there is more than 1 unit, then the sum of their sizes is the total user area, assuming there are no unallocated areas on the disc.

All block numbers in WOMBAT are physical block numbers beginning at

the first sector of the first head of the first cylinder of the drive, which is defined as block zero. The last block on the drive is block $n-1$ where n is the total number of blocks on the drive. Therefore, the first block of the user area is not block zero. Its block number is the same as the number of sectors per track, as track 0 on the drive is reserved. Option 4 of the master menu will display both the size and the offset (starting block number) of each unit defined. Using these figures you can determine the exact position and extent of any unit.

3.9 Drives with Removable Media

Some manufacturers offer drives with removable media. The WQSMC detects when such a drive is connected and makes certain changes to the way it operates. The important changes are that you can only have one virtual unit on a drive whose media can be removed. That unit must have the same unit number as the physical drive number. The reason for this is that it is necessary to determine the unit number even though the media may be removed. This means that the unit number cannot be recorded on the media for these drives. WOMBAT automatically detects these drives and prevents you from creating incorrect units on them.

3.10 Error Recovery Procedures

When a data error occurs the transfer is retried 10 times. If any of the retries is successful, then the block is not replaced. Otherwise, the drive is recalibrated and a further 10 retries are executed. If any of these succeeds then the block is not replaced. If not, the block is assumed to have a hard error. When a hard error is detected the error correction algorithm is invoked and dynamic replacement is scheduled.

When a hard error is detected, a quick check is made to verify that the problems were not caused by a drive hang. A seek to cylinder zero is performed followed by a read of block zero. Then a seek to the RCT cylinder is performed followed by a read of the first block of the RCT. If all of this succeeds then the drive is deemed to be 'OK' and the controller then proceeds with dynamic replacement.

When it has decided to replace a block, the controller first writes the data from the bad block to a special area of the rct together with a flag to indicate whether or not ECC was successful in recovering the data. This transfer is done as a write check operation. Next the bad block is tested by write checking data patterns to it a number of times. If the block appears good after this test, then it is assumed that the error was transient and the original data is written back to the block. The block is not

replaced. If however the block is confirmed as being bad, then a new block is allocated to replace it, and the previously saved data is written to it.

When the saved data is written to the replacement block, the ECC success flag is tested. If it indicates that the data was unrecoverable then the block will be written with forced error status.

3.11 Drive Shadowing

The intent of this feature is to provide a continuous automatic backup of important data. You must first specify a unit to be the shadow unit, that is, the unit onto which the data will be backed up. The primary unit can then be specified - this is unit which the host will see. The normal case would be to have two identical drives with a single unit on each. The primary unit must be of identical size to the shadow. Once the primary/shadow pair has been defined, then the shadow unit will become invisible to the host. All writes directed to the primary will also be written to the shadow. If a read is directed to the primary, the controller will attempt to redirect that read to whichever drive of the pair has its heads positioned closest to the requested data.

This feature will only offer protection against the primary unit failing. It cannot protect, as a normal backup can, against a rogue program which writes garbage on the disc. The garbage will simply be copied onto the shadow unit as well duplicating the garbage. It is advisable, although not mandatory, that the shadow unit is on a different drive to the primary if the maximum protection is to be gained.

If the primary does fail, then you will want to recover the data from the shadow. To do this WOMBAT must be run. First, disable the shadow unit with the "Reset shadow units" option of the Shadow Options Menu. Then (optionally) change the unit numbers of the two units with the "Change unit number" option of the Disc Structure Menu. Once the data has been recovered, the primary unit can be serviced and re-installed in the system.

3.12 Computing Sectors Per Track

To compute the number of sectors per track first determine the number of bytes per track from the drive manual. Divide this figure by the number of bytes per sector. The controller requires at least 595 bytes per sector. The drive switches should be set to provide the appropriate number of sectors per track. In some cases this will result in a short sector at the end of the track. If the drive has a short sector WOMBAT must be told when structuring the disc.

For example the number of full sectors per track for a PRIAM 806 Winchester with an SMD interface would be calculated as follows :-

The unformatted capacity per track is 20,160 bytes. This is divided by 595 giving the number of sectors per track.

$$\begin{array}{r} 20,160 \\ \text{-----} \\ 595 \end{array} = 33.882 \text{ sectors per track}$$

In this case there will be 33 full sectors with one short sector. For a CDC 9715 Winchester, the unformatted capacity of each track is 30,240 bytes.

$$\begin{array}{r} 30,240 \\ \text{-----} \\ 595 \end{array} = 50.824 \text{ sectors per track}$$

In this case there will be 50 full sectors with one short sector.

3.13 WOMBAT Error Messages

The following is a list of the error messages displayed by WOMBAT.

sector not found	Indicates that the sector asked does not exist or cannot be located.
drive fault	Indicates that the drive is faulty and that service is necessary.
drive timed out	Indicates that the drive has failed to complete an operation.
data field error	Indicates that bad data exists in a sector.
controller fault	Indicates controller failure. Service will be necessary.

block marked as bad	Indicates that the block has been flagged as bad. The controller will refer to the RCT for a replacement block.
data late	Data is lost due to internal overflow in controller memory before transmission over the bus to host.
forced error	A forced error occurs when a good block has bad data. The block is flagged forced error until good data is written to the block.
seek error	An error has occurred on a seek operation.
rct full	The replacement control table is full. An error of this kind indicates that the disc has too many errors to be serviceable.
rct read error	Fatal error which indicates the controller cannot read the RCT.
rct write error	Fatal error which indicates the controller cannot write the location of replacement blocks.
illegal sector specified	A sector with an illegal number has been specified.
illegal block number	A block with an illegal number has been specified.
non existent drive	A drive has been specified which does not exist.
unit table full	The unit table is full. The maximum number of units is 16. To create a new unit an existing unit must be undefined.
no drive selected	A drive must be selected before WOMBAT can perform any operation. Select any valid drive.
non-existent unit	The unit selected has not been defined.
disc structure write error	WOMBAT is unable to write the structure to the disc. This is a fatal error indicating that the drive is not serviceable.

3.14 WOMBAT Self-Diagnostics

Initialization procedures

A common initialization procedure exists for both WOMBAT and the MSCP firmware. It performs :

- a RAM integrity test
- a ROM checksum
- various checks on the disc drive and its structure

The errors which can result from this are described under Section 4.9 Fatal Controller Errors.

CHAPTER FOUR

PROGRAMMING



Chapter 4 WQSMC MSCP Programming

4.1 Overview of MSCP

Mass storage control protocol (MSCP) is a message-oriented set of rules by which the WQSMC controller module and the host system communicate. This protocol allows the host to send message requests for data reads or writes to the controller and receive response messages back from the controller. The host does not concern itself with details such as device type, media geometry, media format, or error recovery.

All software and hardware functions are partitioned into independent 'host' and 'controller' layers. Each layer consists of a high-level I/O driver and a communications server. The controller layer receives and processes commands which have been formed by the host layer.

The communications server handles all communications protocol between the I/O layers, leaving the I/O system free to process data requests. Communications between host and controller are carried out on the I/O bus without having to generate processor interrupts. The host's communications server monitors all command transmission and response and in the event of failure or error, initiates recovery procedures.


Disc drive parameters are transparent to both the host and controller resident layers of MSCP. The disc drive passes factors such as disc geometry, storage capacity or error retry counts to the disc controller on system start-up.

In addition to relieving the host of disc-specific data, the disc controller and disc provide the host with "clean" data. The disc drive handles some positioner errors entirely by itself but performs certain error-recovery operations under direction of the disc controller.

4.2 Controller Communications

The host designates an area of memory to be used as a communications area between itself and the controller. This area is made up of two sections a header area containing interrupt identification words and a variable-length section containing the response (receive) and command (send) lists, organised into ring buffers. Figure 4-1 shows the memory communications format.

FIGURE 4-1 MEMORY COMMUNICATIONS FORMAT

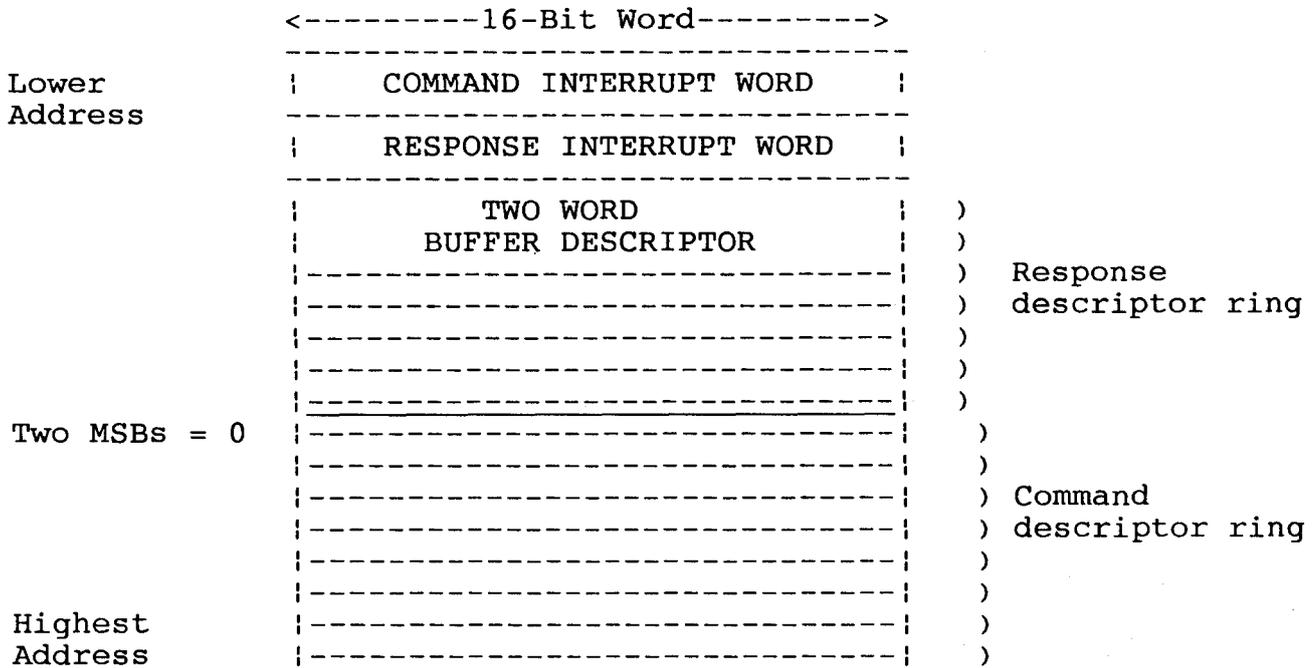

Command and Response Rings

Command and response lists are organised into 'rings' of 32 bit descriptors. The length of each ring is determined by the speed with which the host and controller generate and process messages. The host sets the ring lengths at initialization time. Figure 4-2 describes the Descriptor Format while Table 4-1 details the code descriptions.

FIGURE 4-2 DESCRIPTOR FORMAT

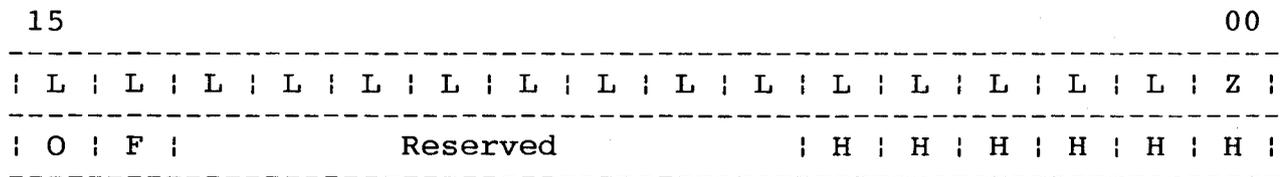


TABLE 4-1 COMMAND RING CODE DESCRIPTIONS

CODE	DESCRIPTION
Z	Is zero, as envelope address (text+0) is word-aligned. The controller will always assume that Bit 00 is set to zero.
L	Low-order envelope address.
H	High-order envelope address.
F	Flag bit.

When the controller returns ownership to the host it sets F=1 to indicate that it has completed action on the descriptor.

When the controller acquires ownership of a descriptor from the host, F=1 indicates that the host is requesting a ring transition interrupt. If F=0, the host is not requesting a ring transition interrupt. An interrupt will occur only if this descriptor causes a ring transition and if transition interrupts were enabled during initialization.

The controller always sets F=1 when returning a descriptor to the host, so if a host wishes to override ring transition interrupts it must always clear F when passing ownership of a descriptor to the controller.

O Ownership bit. Set to 0 if owned by the host or 1 if owned by the controller. Interlocks the descriptor against premature access by either party.

Message Packets

The command or response descriptor points to word (text+0) of a 16-bit word-aligned message envelope formatted as shown in Figure 4-3. Table 4-2 describes the word envelope contents.

FIGURE 4-3 MESSAGE ENVELOPE FORMAT

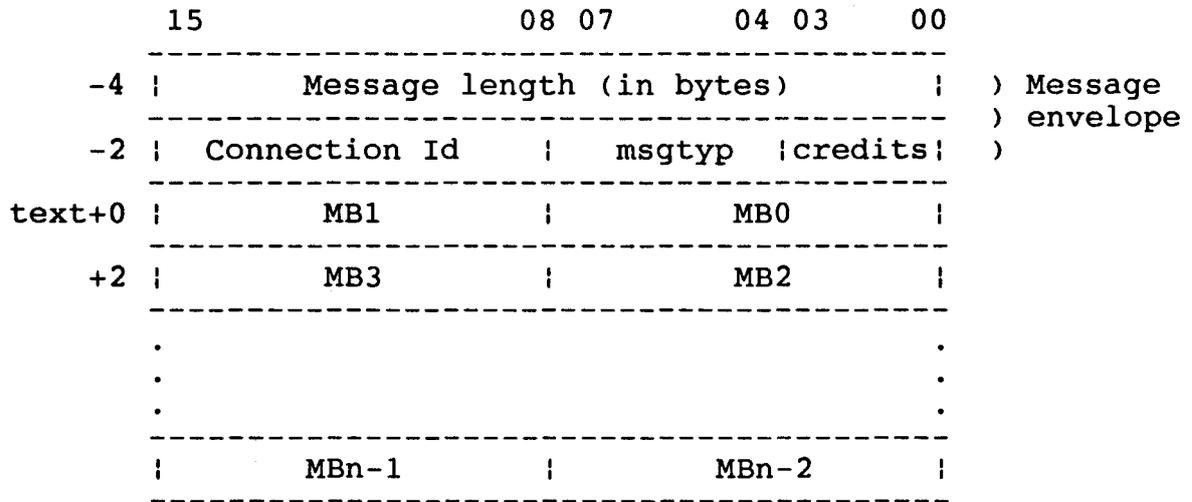


TABLE 4-2 WORD ENVELOPE CONTENTS

WORD	ENVELOPE CONTENTS
0	<p>Message length, in bytes.</p> <p>For commands, this length is equal to the size of the command (in bytes), beginning with [text+0].</p> <p>For responses, the host sets the length equal to the size of the response buffer (in bytes), beginning with <text+0>. Before actual transmission of a response, the controller reads the field length in the message envelope. If the controller's response is longer than the response buffer, the controller will fragment its response into as many response buffers as necessary.</p> <p>The controller sets the resulting value into the message length field. The host must therefore keep re-initializing the value of this field for each proposed response. If a controller's responses are less than or equal to 60 bytes, then the controller need not check the size of the response slot.</p>
1	<p>Connection Id</p> <p>Identifies the connection serving as a source of, or destination for, the message in question.</p>
2	<p>Message Type</p> <p>The following response ring message types are implemented:</p> <ul style="list-style-type: none">MSGMNT Maintenance packet (diagnostic)MSGCRD Credit notice (ignored)MSGDAT Datagram packet.MSGSEQ Sequential packet
3	<p>Credit field</p> <p>Gives a credit value (usually one) associated with the message. This mask, in response packets, is added to the controller's credit field to give the number of commands-in-progress. So while Word 1 is always 1 for the command ring, this is not the case for response rings.</p>

4.3 Message Transmission

Command Transmission

When the ownership bit (O) of a command ring descriptor is equal to 1, it means that the host has filled the descriptor and is releasing it to the controller. When the ownership bit (O) resets to zero, it means that the controller has emptied the command ring descriptor and is returning ownership of the descriptor to the host.

To ensure that the controller sees every command, the host must read the IP register whenever it inserts a command in the command ring. This forces the controller to poll the command if it was not already accessing the command ring.

Response Transmission

When the ownership bit (O) of a response ring descriptor is equal to zero, it means that the controller has filled the descriptor and is releasing it to the host. When the ownership bit (O) sets to 1 it means that the host has emptied the response ring descriptor and is returning ownership of the descriptor to the controller. Just as the controller must poll for commands, so must the host poll for responses.

Interrupts

The transmission of a message will result in a host interrupt from the controller under the following circumstances.

1. During the initialization process (open a 'connection').
2. When the command ring buffer transitions from 'full' to 'not full'. This interrupt means that the host may place another command in the command ring.
3. When the response ring buffer transitions from 'empty' to 'not empty'. This interrupt means that there is a response for the host to process.
4. When a fatal controller error is detected and an interrupt can be generated. These are:

- Failure to become Qbus master for data transfer
- Failure to become Qbus master for interrupt
- Failure to access I/O page registers or communication area
- Qbus parity error detected

4.4 Data Transmission

In the command ring, the descriptor points to a command packet. Within the command packet is a buffer descriptor which contains a pointer and a byte or word count. The buffer descriptor points to the data buffer which holds data transfers. The data is moved by the controller into or out of the buffer as DMA transfers to/from Qbus addresses.

4.5 Initialization

The purpose of initialization is to identify the parameters of the host-resident communications region to the controller, provide a confidence check of controller integrity, and bring the controller online to the host.

Initialization Process

This paragraph describes the activity within the SA register during an initialization process. This is dependent on whether SA is being read or written.

By moving 4000 into IP, the controller initializes and passes back the 'step' response in SA. Then, the initialization parameters are written into SA. There are 4 words of initialization, and the controller must reflect each step by the appropriate step response, which is also returned in SA. The initialisation parameters are set out below in Table 4-3.

TABLE 4-3 INITIALISATION PARAMETERS

WORD	CONTENTS
0	Command and Response ring sizes, interrupt enable and vector. The host writes into SA the lengths of the rings, whether interrupts are to be armed, and if so, the address of the interrupt vector. The controller then runs a complete internal integrity check and signals either success or failure.
1	Low order address of communications area, ie., ring buffer address. The host reads an echo of the ring lengths from SA, and then writes into SA the low-order portion of the ring base address.
2	High order address of communications area, bits 0-14. The interrupt vector address and the master interrupt arming signal are echoed in SA. The host then writes the high order portion of the ring base address to SA along with a signal that conditionally triggers an immediate test of the polling functions of the controller.
3	Burst transfer control, last failure flag, and the 'GO' bit. The controller tests the ability of the Qbus to perform DMA transfers. If successful, the controller zeros the entire communications area, and then signals the host that initialization is complete.

4.6 Registers

The programmable registers contained on the WQSMD are the Initialize and Poll register (IP) and the Status and Address register (SA).

Initialize and Poll Register (IP)

The host begins the initialization sequence by either issuing a bus initialize or by using the IP initialize operation. Any write to that address will cause an initialization of the controller. When read while the controller is operating, it causes the controller to initiate polling. The WQSMD responds to the 16 bit initialization words as set out in Table 4-4.

TABLE 4-4 WQSMC INITIALISATION WORDS

NUMBER		FUNCTION	PROCESSOR
octal	hex		
000250	00A8	WOMBAT	PDP/11
000254	00AC	WOMBAT	MicroVAX II
000260	00B0	WOMBAT	On board port

Status and Address Register (SA)

The SA register consists of a set of two registers, the SA read register and the SA write register.

When read by the host during initialization, it communicates data and error information relating to the initialization process. When written by the host during initialization, it communicates certain host-specific parameters to the controller.

When read by the host during normal operation, it communicates status information including fatal errors detected by the controller.

4.7 MSCP Commands

TABLE 4-5 WQSDM MSCP COMMANDS

COMMAND	FUNCTION
Access	Reads data from the specified unit.
Abort	Guarantees that referenced MSCP command will complete within the controller timeout period.
Available	If specified unit is on-line, returns it to the unit-available state. If specified unit is currently in the unit-available state, this command has no affect.
Compare Host Data	Reads data from the disc and compares it with the data in the host buffer.
Erase	Writes zeros to the specified logical blocks on the unit. (No data is accessed from the host).
Get Command Status	Reports on the status of a specified command by returning a number that reflects the command's progress.
Get Unit Status	Reports on the status of a specified unit.
On Line	Places the specified unit on line, if possible.
Read	Reads data starting from the specified logical block on the disc, into host memory.
Set Controller Characteristics	Sets host-settable controller characteristics.
Set Unit Characteristics	Sets host-settable unit characteristics.
Write	Writes data starting at the specified logical block on the disc, from the host memory.

4.8 Error Handling

High data integrity is achieved by the controller through a 48 bit ECC (error checking and correction) polynomial with an 11 bit correction span. ECC will first try to read or write a block up to 10 times before attempting to correct the error. If error correction fails a non-recoverable error is reported. Table 4-7 details the MSCP status code messages.

4.9 Fatal Controller Error

If a fatal error is detected when the controller is initialized, the red error LED flashes and the fatal error status is set in the SA register. Table 4-6 describes fatal controller errors.

TABLE 4-6 FATAL CONTROLLER ERRORS

ERROR		DESCRIPTION
octal	hex	
125413	AB0B	RAM test failed
126013	AC0B	ROM test failed
126413	AD0B	Cache test failed
127013	AE0B	Cache unlock error
127413	AF0B	Qbus error - get host message
130013	B00B	Qbus error - clear host rings
130413	B10B	Buffers ; free buffer count error
131013	B20B	Queue empty - unfork
131413	B30B	Queue empty - wait
132013	B40B	Queue empty - pause
133013	B60B	Cache parity


TABLE 4-7 MSCP STATUS CODE MESSAGES

MESSAGE	MEANING
Command Aborted	The current command was aborted before it could be completed normally.
Compare Error	While performing a Compare command, a Discrepancy was found while comparing the disc data to the host data.
Controller Error	The WQSMD controller detected an internal error, but is able to continue processing its outstanding commands.
Data Error	An error was detected in the reading or writing of data. ECC attempts to read or write data up to 10 times. If the error persists correction is attempted. If correction fails the error is reported.
Drive Error	A drive-related error was detected (such as a seek failure).
Media Format Error	Indicates that the media mounted on the unit was incorrectly formatted.
Host Buffer Access Error	Reports bus timeouts and parity errors during data transfers. (Applies only to the data portion of an MSCP command).
Invalid Command	The WQSMD controller found some field in the command to be in error.
Success	The command was successfully completed.
Unit Available	The WQSMD controller is not on line, but it can accept an On Line command from the host.
Unit Offline	The WQSMD controller is not on line, and it cannot be brought on line.
Write Protected	A Write or Erase command was attempted to a unit that is logically write-protected.

CHAPTER FIVE

OPERATING

SYSTEMS



Chapter 5 WQSMD Operating Systems

The following discussion is intended to supplement DEC operating system resources and aims to aid the user of the WQSMD in understanding how different operating systems integrate the device. This information will help the user of the controller plan the installation and in choosing the appropriate bus addresses and interrupt vectors for the the disc subsystem. For a complete description the DEC system documentation should be consulted.

5.1 Operating Systems Overview

In order to install any new device in a computer, the host operating system must be informed of the device's existence and where to find that device. In DEC operating systems this can be done in one of the following ways :-

- (a) The device can be manually connected using CONNECT or Configure statements.
- (b) The operating system can be informed about the peripheral device during an interactive SYSGEN.
- (c) The operating system can poll the device I/O address space.

Any of these methods will accomplish the desired result. The host system will be alerted to the device's existence, type, address and interrupt vectors.

Method (a) creates a command file that is executed on power-up. Method (b), interactive sysgen, creates a configuration file that the operating system accesses on power-up. Method (c) is referred to as 'autoconfigure'. RT-11 does not use autoconfigure but references standard bus addresses where it expects to find a device. All DEC operating systems try to follow the same set of rules but there are differences. These are discussed below.

MSCP Devices

The Webster WQSMD is an MSCP (Mass Storage Control Protocol) type device. All MSCP-type devices contain two registers that are visible to the Qbus I/O page. They are the Initialisation and Polling (IP) register and the Status and Address (SA) register.

Qbus Addresses

The standard Qbus address of 17772150 (Octal) is used by all of the operating systems described in this manual as the address of the first controller on the host system. The IP register, CSR address, Qbus address and the base address all refer to the same register.

Vector Addresses

Many operating systems choose vector addresses automatically. If an operating system requires manual input of vector addresses they are programmed into the controller during the initialisation process.

Device Names

Table 5-1 is a list of device names for five operating systems. Two controller and device names are given to indicate the numbering scheme.

TABLE 5-1 DEVICE NAMES IN DEC OPERATING SYSTEMS

OPERATING	CONTROLLER		DRIVE	
	1st:	2nd:	1st:	2nd:
RSTS/E	RU0,	RU1	DU0,	DU1
RSX-11M	---	---	DU0,	DU1
RSX-11M-PLUS	DUA	DUB	DU0,	DU1
RT-11	Port0,	Port1	DU0,	DU1
VAX/VMS	PUA,	PUB	DUA0,	DUA1

5.2 RT-11 Operating System

Installation of a Single Controller

A single controller is installed at the Qbus address of 17772150 (Octal) where RT-11 will find and then install the handler for that device. It is not necessary to run sysgen for a single controller. One of the pre-generated monitors provided with the RT-11 distribution kit can be used. To properly implement disc partitioning, the system start-up file (STARTx.COM) must be modified.

Installation of Multiple Controllers

There are two valid methods that can be used to install multiple controllers. Either by modifying the MSCP handler, which is described in the RT-11 Software Support Manual or by performing a Sysgen. The following procedure describes the SYSGEN technique with user input marked in boldface type.

1. Initiate SYSGEN:

```
IND SYSGEN <return>
```

2. The system will then prompt the user by asking questions. The first concerns the use of a start-up command file when booting.

```
Do you want the start-up indirect  
file (Y)? Y<return>
```

The start-up file performs two main functions. These specify the additional controller addresses and ensure that disc partitioning is carried out consistently on each bootstrap or power-up.

3. Select the device DU: as the MSCP device when prompted for Disc Options.

```
Enter the device name you want support for  
[dd]: DU<return>
```

4. Inform the system of the number of controllers to be installed.

How many ports are to be supported (1)? 2<return>

RT-11 refers to individual MSCP controllers on the host as ports. Each port has its own Qbus and vector addresses.

5. All other devices in the host computer configuration have to be specified. After completing this step, indicate that there are no more devices by entering a period (.).

Enter the device name you want support for
[dd]: .<return>

6. Using the SET CSR keyboard command, specify the address of all the MSCP controllers. These must be added to the system start-up file STARTx.COM. The 'x' indicates the monitor to be used - S for single job, F for foreground/background, and X for extended memory. The command file must be edited to include the following statements :-

```
SET DU CSR0      = 17772150 (DEFAULT)
SET DU CSR1      = 17760334
SET DU VECTOR    = 154      (DEFAULT)
SET DU VEC2      = 160
```

The second device can be at any unused address on the Qbus I/O page supported by the pin settings on the controller. The vector address can be any unused address in the vector page. No default statements are required.

Disc Partitioning Under RT11

Drives with capacities greater than 65,535 blocks (33.5 Mbytes) cannot be handled by RT-11 unless they are partitioned into smaller segments. Each partition can be smaller than 65,535 blocks if desired but there is a maximum of eight logical devices per physical drive. Each logical drive will be addressed by RT-11 as an independent physical drive.

The assignment names of each logical drive must be placed in the start-up command file to ensure that the drives are partitioned consistently and automatically each time the system is booted. The

following is an outline of the procedure used to determine the number of logical drives to be assigned to each physical drive.

1. Decide on the drive configuration to be used. The logical unit number (LUN) and data storage capacity in logical blocks of each logical drive must be known. The controller plug settings must correspond to the bus address selected.
2. The total number of logical discs any physical disc can be partitioned into is calculated by dividing the selected block size of each logical disc into the total capacity of the the disc unit. Round the result to the nearest whole number. The last partition can be less than the maximum size selected. This number equals the number of logical discs.
3. STARTx.COM must now be edited to include the logical names of each partition. The format of each statement is :-

SET DUn UNIT=y PART=x PORT=z

where 'n' is the logical device name, 'y' is the unit number, 'x' is the partition number, and 'z' is the controller number. This must be done for each partition on each drive, including drives that have only one partition.

Sample Disc Partitioning Procedure

The following is an example of the disc partitioning procedure for a drive of 245,412 blocks and a drive of 204,800 blocks. It has been decided to partition the drives into logical units of 65,535 blocks.

$$\begin{array}{l} \text{(a)} \quad \begin{array}{r} 245,412 \\ \hline 65,535 \end{array} = 3.74 \quad (4 \text{ logical units }) \\ \text{(b)} \quad \begin{array}{r} 204,800 \\ \hline 65,535 \end{array} = 3.12 \quad (4 \text{ logical units }) \end{array}$$

Dividing the unit capacities by 65,535 and rounding the result to the nearest whole number gives the number of logical units. If the

remainder is very small (under 800 blocks) then it would be advisable to round the figure down rather than up to the next highest number. This may avoid problems with partitions that are too small to be practicable.

Logical names can then be assigned to the partitions beginning with DU0 on controller unit 0 and modifying the start-up file to include the assignments.

```
SET DU0 UNIT=0 PART=0 PORT=0
SET DU1 UNIT=0 PART=1 PORT=0
SET DU2 UNIT=0 PART=2 PORT=0
SET DU3 UNIT=0 PART=3 PORT=0

SET DU4 UNIT=1 PART=0 PORT=0
SET DU5 UNIT=1 PART=1 PORT=0
SET DU6 UNIT=1 PART=2 PORT=0
SET DU7 UNIT=1 PART=2 PORT=0
```

5.3 RSTS/E Operating Systems (V8.0 and above)

RSTS/E can support two MSCP type controllers. The first is located at the standard Qbus address (17772150 octal) while the second can be located in floating address space. However, the recommended address for the second controller is 17760334. A controller must be located at the standard Qbus address to be a bootstrap device.

A program called INIT.SYS scans the system on power-up. INIT.SYS references a user-specified table located in the currently installed monitor. To alter the autoconfigure algorithm, the HARDWARE sub-option of INIT.SYS is used. This modifies the configuration table and allows an MSCP controller to be placed at any address on the I/O page. If a new monitor is installed then the table must be reset.

Controllers are assigned vector addresses and programmed by INIT.SYS during initialisation.

Warning: RSTS/E supports discs of a maximum size of 1,048,576 blocks. Larger drives must be broken up into multiple smaller virtual units. At a later date RSTS/E may support larger discs, refer to the RSTS/E Software Despatch for details.

5.4 RSX-11M Operating Systems (V4.0 and above)

The RSX-11M SYSGEN program is an interactive program that builds a complete and running RSX-11M system for a particular hardware configuration. RSX-11M SYSGEN supports autoconfigure. This program detects MSCP type controllers located at standard Qbus addresses. Additional controllers must be manually attached to the system according to the procedure outlined below. The procedure is fully outlined in the RSX-11M System Generation and Configuration Guide.

Installing a Single Controller

A single controller is installed at the standard Qbus address of 17772150 (Octal). Autoconfigure can then be used to connect peripheral devices.

Installing Multiple MSCP Controllers

For two controllers manual initialisation must be undertaken. The following procedure will connect the devices to the operating system:-

1. Invoke SYSGEN.

```
>SET/UIC=[200,200]<return>  
>SYSGEN<return>
```

2. Indicate that AUTOCONFIGURE has to be used by answering Y (Y) to the following :-

```
* Autoconfigure the host system hardware?  
[Y/N]: Y<return>
```

3. Indicate that the autoconfigure results are not to be overridden. Answer N (no) to the following :-

```
* Do you want to override Autoconfigure  
results? [Y/N]: N<return>
```

Continue to answer the SET-UP questions as required then continue onto the TARGET CONFIGURATION section. Target configuration defaults for the first group of questions should be accurate because autoconfigure was used.

4. Indicate the number of devices that are installed.

```
* Devices: DU=2<return>
* Devices: .<return>
```

Enter the correct value of two. The period (.) terminates the device input operation.

The questions over the next four sections - HOST CONFIGURATION, EXECUTIVE OPTIONS, TERMINAL DRIVER OPTIONS, and SYSTEM OPTIONS - should be answered appropriately.

5. After answering the above sections it is necessary to define the PERIPHERAL OPTIONS for the controllers on the system. The questions will be asked once for each controller. The abbreviated form of controller "contr" is used.

The first prompt is for the interrupt vector address, Qbus address, the number of DU-type disc drives, the number of command rings, and the number of response rings. There is no default value for the number of disc drives.

```
* DU contr 0 [D:154,17772150,,4,4]
* 154,17772150,3,4,4<return>
```

Vector and Qbus Addresses

The standard vector address for MSCP controllers is 154 (octal). Any unused vector between 300 (octal) and 774 (octal) can be allocated for the second unit.

The standard Qbus address of 17772150 (octal) is used for the first controller, while the second can be 17760334 (octal) or in floating LSI-11 address space.

Drive Configuration

The following is a list of DEC manufactured drives that are DEC operating system compatible. Non-DEC drives must be compatible with those listed below. If in doubt consult the manufacturer's specifications to verify compatibility.

- *RX50
- *RD51
- *RD52
- *RC25
- *RA60
- *RA80
- *RA81

Count each RX50 drive as two drives, these contain two 5.25 inch floppy discettes. The RC25 has both fixed and removable media and should also be counted as two drives.

The configuration of the drives and the logical arrangement (disc partitions) for the disc sub-system is programmed by WOMBAT.

MSCP Ring Buffers

Command and response ring buffers which MSCP establishes in main memory also have to be specified. RSX-11M supports a maximum of eight rings. A value of four will minimise system overhead and is the recommended and default value.

6. The type of disc drives on each controller must now be specified.

*DU contr 0 unit 0. is an RA60/80/81/RC25/RD51/rx50
[D:RA81] RD51<return>

For the RQDX1, indicate that there is a RD51 and two RX50 drives. For the WQSM, indicate that there is one RD51 for each logical disc drive.

RSX-11M must have contiguous unit numbers which must be the same as those reported by the controller during initialisation.

Warning: Versions of RSX-11M prior to 4.2C support discs of a maximum size of 1,044,480 blocks. Larger drives must be broken up into multiple smaller virtual units.

5.5 RSX-11M-PLUS Operating Systems (V2.1 and above)

As with RSX-11M an interactive SYSGEN will build a complete running version of RSX-11M-Plus for a particular hardware configuration. RSX-11-Plus supports autoconfigure and will detect the first controller located at the standard Qbus address. Additional controllers must be installed manually.

Installing a Single Controller

A single controller is installed at the standard Qbus address of 17772150 (octal) using autoconfigure to connect the peripherals. The procedure is fully outlined in the RSX-11M-Plus System Generation and Configuration Guide.

Installing Multiple Controllers

To add the WQSMC to the system configuration use the Add a Device option of SYSGEN or do a complete SYSGEN. The Add a Device procedure is described below :-

1. Invoke SYSGEN

```
>SET/UIC=[200,200]<return>  
>@SYSGEN<return>
```

2. Answer N (no) to the following questions to indicate that only a subset of the SYSGEN procedure is wanted:-

```
* SU120 Do you want to do a complete SYSGEN?  
[Y/N D:Y]: N<return>
```

```
* SU130 Do you want to continue a previous SYSGEN  
from some point? [Y/N D:Y]: N<return>
```

3. Indicate that a specific module of SYSGEN is required by answering Y (yes) to the following :-

```
* SU150 Do you want to do any individual sections  
of SYSGEN? [Y/N D:Y]: Y<return>
```

4. Select the Add a Device option of SYSGEN by typing the letter H.

* SU160 Which sections would you like to do?
[S R:0.-15.]: H<return>

SYSGEN now asks questions about the type and number of controllers to be installed in the system. There is one question for each controller supported. Type 0 (zero) until the prompt for UDA-type devices appears.

5. Specify the number of MSCP devices when asked by typing :-

* CP3004 How many MSCP disc controllers do you have? [D R:0.-63. D:0.] 2<return>

6. Give the total number of drives on each controller installed on the system.

* CP3008 How many MSCP disc drives do you have?
[D R:0.-n. D:1.] 5<return>

The following is a list of DEC manufactured drives that are DEC operating compatible. Non-DEC drives must be compatible with those listed below. If in doubt consult the manufacturer's specifications to verify compatibility.

*RX50
*RD51
*RD52
*RC25
*RA60
*RA80
*RA81

Count each RX50 drive as two drives, these contain two 5.25 inch floppy discs. The RC25 has both fixed and removable media and should also be counted as two drives.

The configuration of the drives and the logical arrangement (disc partitions) for the disc sub-system is programmed by WOMBAT.

7. SYSGEN then asks the user to specify controllers for each drive.

* CP3044 To which DU controller is DU0:
connected? [S R:1-1]: A<return>

This question is repeated until the number of MSCP drives has been exhausted. RSX-11M-Plus must have contiguous unit numbers and be the same as those reported by the controller during initialisation or errors will occur. Use A as the primary and B as the alternate controller.

8. Enter the Vector Address for each controller.

* CP3068 Enter the vector address of DUA
[O R:-774 D:154]

The standard vector address for MSCP controllers is 154 (octal). Any unused vector between 300 (octal) and 774 (octal) can be allocated for the second unit.

9. Enter the CSR address for each controller.

* CP3076 What is its CSR address?
[O R:1.-8. D:4.] 4<return>

The standard CSR address 17772150 (octal) is used for the first controller, while the second can be 17772154 (octal) or in floating CSR address space.

10. Specify the number of command rings for each MSCP controller.

* CP3076 Enter the number of command rings for
DUA [D R:1.-8. D:4.] 4<return>

RSX-11M-Plus supports a maximum of eight command rings. A value of four will minimise system overhead and is the recommended and default value.

11. Specify the number of response rings for each MSCP controller.

* CP3076 Enter the number of response rings for
DUA [D R:1.-8. D:4.] 4<return>

RSX-11M-Plus supports a maximum of eight response rings. A value of four will minimise system overhead and is the recommended and default value.

Warning: Versions of RSX-11M Plus prior to 3.0C support discs of a maximum size of 1,044,480 blocks. Larger drives must be broken up into multiple smaller virtual units.

5.6 MicroVMS Operating Systems

The first WQSMD controller is located at the standard bus address of 17772150 (Octal) and the second in floating address space. The MicroVMS SYSGEN utility can determine the Qbus and interrupt vector addresses for any of the I/O devices installed on the bus. MicroVAX/MicroVMS must be running in order to use this utility. The Qbus and interrupt vector addresses can be determined manually if access to a running system is not possible.

Using MicroVAX/MicroVMS SYSGEN

The following is an outline of the MicroVMS SYSGEN procedure to determine Qbus and Interrupt vector addresses. This procedure requires system manager privileges.

1. Login and run the SYSGEN utility.

```
$ RUN SYSSYSTEM:SYSGEN<return>  
SYSGEN>
```

The SYSGEN> prompt indicates that the program is ready.

2. Obtain a list of the devices currently installed on the MicroVAX Qbus by typing :-

```
SYSGEN> SHOW/CONFIGURATION<return>
```

and get :-

```
Name: PUA Units: 1 Nexus: 0 CSR: 772150 Vector1: 154 Vector2: 000  
Name: TXA Units: 1 Nexus: 0 CSR: 760500*Vector1: 310*Vector2: 000
```

* Indicates a floating vector or address.

Sysgen lists the devices already installed on the Qbus by logical name. Devices with floating bus and vector addresses should be noted if it is intended to re-install them with the WQSMC controller. Floating bus addresses will be larger than 760000 (octal). Floating interrupt vectors will be larger than 300 (octal).

3. Execute the configure command. This will determine the Qbus and Vector addresses that autoconfigure will expect for each device type.

```
SYSGEN> CONFIGURE<return>  
DEVICE>
```

Specify the devices to be installed on the bus by typing their Qbus names. Under MicroVAX/MicroVMS the device name for MSCP-type controllers is UDA.

```
DEVICE> UDA,2<return>  
DEVICE> DHV11<return>
```

The device name is separated from the number of devices by a comma. The number of devices is specified in decimal.

Devices with floating addresses or vectors are not affected by devices with fixed addresses or vectors. Only devices with floating addresses or vectors need be specified.

4. When all the devices have been specified enter a control-Z.

DEVICE> ^Z

The addresses and vectors of the devices entered will be listed in the following manner :-

```
Device: UDA   Name: PUA  CSR: 772150  Vector: 154  Support: yes
Device: UDA   Name: PUB  CSR: 760334* Vector: 300*  Support: yes
Device: DHV11 Name: TXA  CSR: 760500* Vector: 310*  Support: yes
```

* Denotes floating bus and interrupt vector addresses. Floating CSR addresses must be programmed into the WQSMC by selecting the correct pin configuration on the PCB.

5. If an address other than that selected for the WQSMC by CONFIGURE command is desired, CONNECT statements must be entered into the SYSCONIF.COM file. SYSCONIF.COM can only be accessed through the system manager's account SYSSMANAGER. The correct syntax is given in the DEC MicroVMS SYSGEN documentation.

The STARTUP.COM or UVSTART.COM command files in the main system account, SYSSSYSTEM must not be altered.

5.7 Autoconfigure

Autoconfigure is a utility program that finds and identifies I/O devices in the I/O page of system memory. Most devices have a fixed bus address reserved for them. When the computer is bootstrapped autoconfigure polls those addresses - specifically the console status register (CSR) which is usually the first register of the block.

A block of addresses is reserved when a device is detected. The size of the block is determined by the number of registers the device uses. Autoconfigure then looks to the next CSR address space for that same type of device. If there are no other devices of that type autoconfigure looks to the next valid CSR address. Autoconfigure expects an eight byte block to be reserved for each device not installed in the system. An empty block tells autoconfigure to look to the next valid address space.

Devices with no fixed address are assigned addresses from floating CSR address space. This may be necessary if there are several of the

same device in the system. Floating address space is in the vicinity of 76000 to 763776 of the bus I/O page. Devices can also have floating interrupt vector addresses. Floating CSR and interrupt vectors must be assigned in specific sequences depending on the rank of the device (see Table 5-2). The presence or absence of floating bus and interrupt vector address devices will affect the assignment of addresses to other floating vector devices.

TABLE 5-2 SYSGEN DEVICE RANKING

Rank	Device	Number of Registers	Octal Modulus	Rank	Device	Number of Registers	Octal Modulus
1	DJ11	4	10	17	Reserved	4	10
2	DH11	8	20	18	RX11 ²	4	10
3	DQ11	4	10	18	RX211 ²	4	10
4	DU11, DUV11	4	10	18	RXV11 ²	4	10
5	DUP11	4	10	18	RXV21 ²	4	10
6	LK11A	4	10	19	DR11-W ³	4	10
7	DMC11	4	10	20	DR11-B ³	4	10
7	DMR11 ¹	4	10	21	DMP11	4	10
8	DZ11 ¹	4	10	22	DPV11	4	10
8	DZV11	4	10	23	ISB11	4	10
8	DZS11	4	10	24	DMV11 ²	8	20
8	DZ32	4	10	25	DEUNA ²	4	10
9	KMC11	4	10	26	UDA50 ²	2	4
10	LPP11	4	10	27	DMF32	16	40
11	VMV21	4	10	28	KMS11	6	20
12	VMV31	8	20	29	VS100	8	20
13	DWR70 ²	4	10	30	TU81	2	4
14	RL11 ²	4	10	31	KMV11	8	20
14	RLV11 ²	4	10	32	DHV11	8	20
15	LPA11-K ²	8	20	33	DMZ32	16	40
16	KW11-C	4	10	34	CP132	16	40

¹ DZ11-E and DZ11-F treated as two DZ11s.

² The first device of this type has a fixed address while extra devices have floating addresses.

³ The first two devices of this type have fixed addresses while extra devices have floating addresses.

An eight byte gap must also be reserved in floating address space for each device type not currently installed in the system. This gap must start on the proper boundary. See Table 5.6 for an example of gap placement.

A device's CSR address is determined on word boundaries according to the number of bus accessible registers the device has. The relationship of word boundaries and device registers is set out in Table 5-3. Autoconfigure only inspects for a device type at one of the possible device boundaries. For instance, autoconfigure will not look for a DMZ32 which has 16 registers at an address that ends in 20.

TABLE 5-3 DEVICE REGISTERS AND WORD BOUNDARIES

Device Registers	Possible Boundaries
1	Any word
2	XXXXX0, XXXXX4
3, 4	XXXXX0
5, 6, 7, 8	XXXX00, XXXX20, XXXX40, XXXX60
9 thru 16	XXXX00, XXXX40

Vector Addresses and Autoconfiguration

Devices are assigned vector addresses in order of rank commencing at 300 (octal) up to 777 (octal). Extra devices of the same type are assigned consecutive vector addresses according to the number of vectors required and starting boundaries for each device type. Table 5-4 shows the order of assignment.

The boundaries in the modulus column indicate where vector addresses are assigned. If the modulus is 10 the first vector address for that device must end with a zero (XX0). If the modulus is 4 the first vector must end with either a zero or four (XX0, XX4).

Vector addresses can only end on an address of four or zero i.e. modulo 4 boundaries (XX0, XX4). If a device has two vectors the first must start on a modulo 10 boundary. Using 350 as a starting point the vectors will be 350 and 354.

TABLE 5-4 FLOATING VECTOR ADDRESS DEVICE PRIORITY RANKING

Rank	Device	Number of Vectors	Octal Modulus
1	DC11	2	10
1	TU58 ₁	2	10
2	KL11 ₁	2	10
2	DL11-A ₁	2	10
2	DL11-B ₁	2	10
2	DLV11-J ₁	8	40
2	DLV11,DLV11-F ₁	2	10
3	DP11	2	10
4	DM11-A	2	10
5	DN11	1	4
6	DM11-BB/BA	1	4
7	DH11 modem control	1	4
8	DR11-A, DRV11-B	2	10
9	DR11-C, DRV11	2	10
10	PA611 (reader + punch)	4	20
11	LPD11	2	10
12	DT07	2	10
13	DX11	2	10
14	DL11-C TO DLV11-F	2	10
15	DJ11	2	10
16	DH11	2	10
17	VT40	4	20
17	VSV11	4	10
18	LPS11	6	40
19	DQ11	2	10
20	KW11-W, KWV11	2	10
21	DU11, DUV11	2	10
22	DUP11	2	10
23	DV11 + modem control	3	20
24	LK11-A	2	10
25	DWUN	2	10
26	DMC11	2	10
26	DMR11	2	10
27	DZ11/DZS11/DZV11	2	10
27	DZ32	2	10
28	KMC11	2	10
29	LPP11	2	10

continued on next page...

TABLE 5-4 FLOATING VECTOR ADDRESS PRIORITY RANKING

Rank	Device	Number of Vectors	Octal Modulus
30	VMV21	2	10
31	VMV31	2	10
32	VTV01	2	10
33	DWR70	2	10
34	RL11 ¹ /RLV11 ²	1	4
35	TS11 ² , TU80 ²	1	4
36	LPA11-K	2	10
37	IP11/IP300 ²	1	4
38	KW11 ² C	2	10
39	RX11 ²	1	4
39	RX211 ²	1	4
39	RXV11 ²	1	4
39	RXV21 ²	1	4
40	DR11-W ²	1	4
41	DR11-B ²	1	4
42	DMP11	2	10
43	DPV11 ³	2	10
44	ML11 ³	1	4
45	ISB11	2	10
46	DMV11 ²	2	10
47	DEUNA ²	1	4
48	UDA50 ²	1	4
49	DMF32	8	40
50	KMS11	3	20
51	PCL11-B	2	10
52	VS100	1	4
53	Reserved	1	4
54	KMV11	2	10
55	Reserved	2	10
56	IEX	2	10
57	DHV11	2	10
58	DMZ32	6	20
59	CP132	6	20

1 KL11 or DL11 have fixed vectors when used as a console.
 2 The first device has a fixed vector all subsequent device of the same type have a floating vector.
 3 ML11 is a Mass Bus device which connects to the Qbus or Unibus via a bus adaptor.

System Configuration Example

An example of a system configuration is shown in Table 5-5. The configuration includes both fixed and floating addresses and vectors.

TABLE 5-5 CSR AND VECTOR ADDRESS EXAMPLE

Controller	Vector	CSR
1 UDA50	154	772150
1 DZ11	300	760100
1 UDA50	310	760334
2 DHV11	320	760520
	330	760520

Table 5-6 shows the computed CSR addresses and gaps for floating devices.

TABLE 5-6 FLOATING CSR ADDRESS ASSIGNMENT

Installed	Device		Octal Address
	DJ11	Gap	760010
	DH11	Gap	760020
	DQ11	Gap	760030
	DU11	Gap	760040
	DUP11	Gap	760050
	LK11A	Gap	760060
	DMC11	Gap	760070
----->	DZ11		760100
		Gap	760110
	KMC11	Gap	760120
	LPP11	Gap	760130
	VMV21	Gap	760140
	VMV31	Gap	760150
	DWR70	Gap	760170
	RL11	Gap	760200
	LPA11-K	Gap	760220
	KW11-C	Gap	760230
	Reserved	Gap	760240
	RX11	Gap	760250
	DR11-W	Gap	760260
	DR11-B	Gap	760270
	DMP11	Gap	760300
	DPV11	Gap	760310
	ISB11	Gap	760320
	DMV11	Gap	760330
	DEUNA	Gap	760340 ¹
----->	UDA50 (WQSMD)		772150 ¹
----->	UDA50 (WQSMD)		760354
		Gap	760360
	DMF32	Gap	760400
		Gap	760440
	KMS11	Gap	760420
	VS100	Gap	761440
	TU81	Gap	761450
	KMV11	Gap	761460
----->	DHV11		761500
----->	DHV11		761520
		Gap	761530
	DMZ32	Gap	761540
	CP132	Gap	761600

¹ indicates a fixed address device

CHAPTER SIX

CACHE OPERATION



Chapter 6 WQSMC Cache Operation

6.1 WQSMC Disc Cache

The WQSMC implements a disc cache which is designed to facilitate larger and faster data transfers between disc and the host by reducing the time wasted on positioner operations. Even with fast drives 98% of disc time for continuous random access to single sectors of data is taken by positioner operations. The WQSMC offers at least an 80% improvement in access times by reducing the number of disc accesses required. The WQSMC cache is implemented as one megabyte of dynamic RAM.

6.2 Read Look-ahead

The WQSMC allows the user to program the controller to perform read look-ahead in anticipation of impending data requests. The optimum look-ahead value can only be determined within system and application parameters but can range from 0 to 255 blocks. A value of zero will disable the feature. The default value is four.

The anticipated hit ratio for the WQSMC cache is 90% although this can be reduced depending upon the nature of the data accessed. Because most user programs write and read data sequentially there is a high probability that in one fetch operation the controller will be able to satisfy several sequential data reads without the need for further disc accesses.

The cache has been designed to maximise the probability of finding the target data over a range of sequential and non-sequential reference patterns while minimising cache misses and controller overhead.

6.3 Cache Allocation

Cache memory is used to hold the disc cache blocks, a cache map and fixed buffers for special usage. Data from the disc or main memory is stored in blocks at addresses determined by the cache assignment algorithm. Their contents and location are recorded in the cache map.

The cache map consists of a 4-byte entry for each cache block. The cache map is indexed by the cache block number and contains the address (drive number, logical block) of the current occupant together with flags (locked, valid, primary copy not written, shadow copy not written).

Fixed buffers are assigned for RCT buffers (1 per drive) and a single block buffer for disc management I/O. The location and size of all cache variables are held in RAM.

6.4 Cache Usage

All disc I/O is done via the cache. A set of cache blocks must be assigned for all transfers and continuous disc operations must be done via contiguous cache blocks. Disc and Qbus transfers are performed simultaneously.

6.5 Cache Assignment Algorithm

The WQSMD cache implements a contention based hashing algorithm to determine block replacement. A given disc block has a fixed cache address calculated as follows :-

- (a) Get the remainder of the logical block number modulo the number of cache blocks.
- (b) Bias this by a fixed offset which is a function of the drive number. (This is so that the same logical block on 2 discs have a different cache block number).

A disc block also has an alternative cache address calculated by biasing it by approximately half the number of cache blocks. The alternate cache block is only used for compare operations.

6.6 Cache Operation

The following is a description of the cache operation algorithm :-

Read:

Examine cache for data required.

 If all data in cache
 Transfer data from cache to Qbus

else

 Assign cache (lock it and wait if locked already)
 Perform read
 Unlock cache and flag as valid

Write:

 Assign cache (lock it and wait if locked already)
 Transfer from Qbus to cache and flag as valid
 Perform write
 Unlock cache

6.7 Cache Disable

The WQSMD cache can be disabled for performance evaluation, engineering, and diagnostic application requirements by selecting that option in WOMBAT. The cache cannot be selectively disabled for a particular drive.


6.8 Early Write Notification

The WQSMD implements early write notification where data to be written to disc is retained in the cache and the host is issued a write complete notification. The controller will then write the data to the disc at the most convenient time.

It should be noted that in the event of system failure any data residing in the cache will be lost. The early write notification can be disabled by invoking WOMBAT and selecting the appropriate option.

CHAPTER SEVEN

QBUS INTERFACE



Chapter 7 WQSMD Qbus Interface

7.1 Qbus Interface

All data, address and control information transfers between the processor and disc controller are carried out over the Qbus. The WQSMD supports all current Qbus functions including block mode DMA, 22 bit addressing, 4-level position independent interrupt structure, all LSI-11 CPU's and MicroVAX II.

The Qbus consists of 42 bidirectional and 2 unidirectional signal lines wired into the backplane assembly. These are grouped into the following categories :-

- * Sixteen multiplexed data/address lines - BDAL<15:00>
- * Two multiplexed address/parity lines - BDAL<17:16>
- * Four extended address lines - BDAL<21:18>
- * Six data transfer control lines - BBS7L, BDINL, BDOUTL, BRPLYL, BSYNCL, BWTBTL
- * Six system control lines - BHALTL, BREFL, BEVNTL, BINITL, BDCOKL, BPOKL
- * Ten interrupt control and direct memory access control lines - BIAKOL, BIAKIL, BIRQ4L, BIRQ5L, BIRQ6L, BIRQ7L, BDMGOL, BDMRL, BSACKL, BDMGIL

Communication is asynchronous, allowing devices with differing data rates to share the bus. A strict master/slave protocol avoids the need for synchronising clock pulses by implementing handshaking and other control signals between I/O devices.

7.2 Interrupts

Interrupt priority for the WQSMD is plug selectable on the PCB. The recommended priority setting is level four. Note that if level five is set and a third party controller is installed also set to level five, then a fatal BUGCHECK can occur.

Interrupts suspend program execution while the processor starts the device service routine at a vector address input from the requesting device.

Interrupts are serviced according to device priority. Device

priority can be determined in two ways. These are termed 'Position Defined' and 'Distributed' arbitration. Positioned Defined arbitration gives priority to those devices which are electrically closest to the processor. Distributed arbitration implements priority according to the priority levels set on the device hardware. When devices with equal priority generate an interrupt, the processor gives preference to the device which is electrically closest. A previous bus transaction must have been completed before another can be commenced.

The interrupt protocol has three phases :-

1. Interrupt Request Phase. The interrupt enable bit in the status register is set and interrupt request lines are asserted according to priority settings.
2. Interrupt Acknowledge and Priority Arbitration Phase. The processor detects the request and checks if any other device with higher priority is requesting an interrupt. If there are no devices with higher priority seeking an interrupt the processor acknowledges the interrupt.
3. Interrupt Vector Transfer Phase. The device outputs vector address bits to the processor which then enters the device service routine.

7.3 Direct Memory Access

The WQSMD supports both normal and block mode Direct Memory Access (DMA). During a DMA transfer the processor passes mastership of the bus to the controller.

During block mode DMA transfer the WQSMD has a four microsecond delay after every 16 words to service any pending interrupt or DMA requests from other devices. The WQSMD also detects DMA requests from other devices and will implement a 'DMA Throttle' after eight words. This prevents data loss from other DMA devices which may also share the Qbus.

The WQSMD interleaves address references with bursts of data during DMA. Because the starting memory address is asserted only once every sixteen data words so data throughput is almost doubled.

DMA protocol consists of three phases :-

1. Bus Mastership Acquisition Phase. The WQSMD requests control of the bus. The processor arbitrates the request then initiates the transfer of bus mastership.
2. Data Transfer Phase. The processor provides the

controller with the following information utilising MSCP - block number on the disc, the number of bytes to transfer, and address in main memory, and if the operation is a read or write.

3. Bus Mastership Relinquish Phase. Bus mastership is relinquished after completing or aborting the data transfer cycle.

For a detailed explanation of all Qbus functions the appropriate DEC manuals should be consulted.

CHAPTER EIGHT

SMD INTERFACE



Chapter 8 WQSMD SMD Interface

8.1 SMD INTERFACE

The Storage Module Drive (SMD) interface is an industry standard for high capacity disc drives. The basic interface consists of a control cable, read/write cable, and a ground cable. The control and read/write cables are available in either flat-ribbon or twisted pair configurations. The WQSMD uses the flat-ribbon cable only.

The control cable connects each drive to the host in either radial or daisy-chained configuration. The maximum cable length is 30 metres. The control cable is terminated on the last drive. The read/write cable connects to each drive in a radial fashion only and has a maximum length of 15 metres. The read/write cable is terminated at the last drive. Ground cabling should establish the host, drives and cabinets at the same safety ground reference.

The SMD interface has been modified by various manufacturers. The WQSMD supports the following types of SMD interface with no software or hardware changes. All the modified versions of the SMD interface implement the minimum set of requirements of interchangeability and compatibility for SMD devices but with degrees of flexibility.

Standard	1024 Cylinder address capability 1 Byte status available 9 Control functions
Modified	4096 Cylinder address capability 4 Byte status available 12 Control functions
Enhanced	2048 Cylinder address capability 1 Byte status available 10 Control functions
Extended	1M Cylinder address capability 16 Byte status available 19 Control functions
SMD-E	4096 Cylinder address capability 7 Byte status available 12 Control functions

The WQSMD simultaneously supports any combination of SMD interface drives and data rates on the one controller. Pin assignments for the various SMD interface types are set out in Tables 8-1, 8-2, 8-3, 8-4 and 8-5. The SMD documentation should be consulted for a detailed explanation of the specific function details of each SMD interface type.

8.2 Standard SMD Interface

TABLE 8-1 SMD STANDARD CONTROL CABLE SIGNALS

SIGNAL NAME	SOURCE	SIGNAL PIN	
		+	-
DEVICE SELECT ENABLE	HOST	44	43
DEVICE SELECT 0	HOST	46	45
DEVICE SELECT 1	HOST	48	47
DEVICE SELECT 2	HOST	52	51
DEVICE SELECT 3	HOST	54	53
TAG 1	HOST	2	1
TAG 2	HOST	4	3
TAG 3	HOST	6	5
TAG BUS 0 (B0)	HOST	8	7
TAG BUS 1 (B1)	HOST	10	9
TAG BUS 2 (B2)	HOST	12	11
TAG BUS 3 (B3)	HOST	14	13
TAG BUS 4 (B4)	HOST	16	15
TAG BUS 5 (B5)	HOST	18	17
TAG BUS 6 (B6)	HOST	20	19
TAG BUS 7 (B7)	HOST	22	21
TAG BUS 8 (B8)	HOST	24	23
TAG BUS 9 (B9)	HOST	26	25
INTERFACE ENABLE	HOST	28	27
STATUS 0 (UNIT READY)	DEVICE	38	37
STATUS 1 (ON CYLINDER)	DEVICE	34	33
STATUS 2 (SEEK ERROR)	DEVICE	32	31
STATUS 3 (FAULT)	DEVICE	30	29
STATUS 4 (WRITE PROTECTED)	DEVICE	56	55
STATUS 5 (ADDRESS MARK)	DEVICE	40	39
STATUS 6 (INDEX)	DEVICE	36	35
STATUS 7 (SECTOR)	DEVICE	50	49
BUSY	-	42	41
	-		
PICK	-		57
SEQUENCE	-		58
	-		
SPARE	-	60	59

The standard SMD interface uses BUS0 through BUS9 with TAG1 (Set Cylinder & Seek Command) to address up to 1024 cylinders. Has only one disc status byte.

8.3 Extended SMD Interface

TABLE 8-2 SMD EXTENDED CONTROL CABLE SIGNALS

SIGNAL NAME	SOURCE	SIGNAL PIN	
		+	-
DEVICE SELECT ENABLE	HOST	44	43
DEVICE SELECT 0	HOST	46	45
DEVICE SELECT 1	HOST	48	47
DEVICE SELECT 2	HOST	52	51
DEVICE SELECT 3	HOST	54	53
TAG 1	HOST	2	1
TAG 2	HOST	4	3
TAG 3	HOST	6	5
TAG 4	HOST	60	59
TAG BUS 0 (B0)	HOST	8	7
TAG BUS 1 (B1)	HOST	10	9
TAG BUS 2 (B2)	HOST	12	11
TAG BUS 3 (B3)	HOST	14	13
TAG BUS 4 (B4)	HOST	16	15
TAG BUS 5 (B5)	HOST	18	17
TAG BUS 6 (B6)	HOST	20	19
TAG BUS 7 (B7)	HOST	22	21
TAG BUS 8 (B8)	HOST	24	23
TAG BUS 9 (B9)	HOST	26	25
INTERFACE ENABLE	HOST	28	27
STATUS 0 (UNIT READY)	DEVICE	38	37
STATUS 1 (ON CYLINDER)	DEVICE	34	33
STATUS 3 (FAULT)	DEVICE	30	29
STATUS 4 (WRITE PROTECTED)	DEVICE	56	55
STATUS 5 (ADDRESS MARK)	DEVICE	40	39
STATUS 6 (INDEX)	DEVICE	36	35
STATUS 7 (SECTOR)	DEVICE	50	49
BUSY	-	42	41
	-		
ROTATIONAL POSITIONING (INDEX)	-	57	
ROTATIONAL POSITIONING (SECTOR)	-	58	

Uses BUS0 through BUS9 with TAG4 and TAG1 to provide a 20 bit cylinder address. Uses BUS0 through BUS9 to provide a 20 bit head address. Uses unit select lines with TAG4 to provide up to 16 Disc status bytes.

8.4 Modified SMD Interface

TABLE 8-3 SMD MODIFIED CONTROL CABLE SIGNALS

SIGNAL NAME	SOURCE	SIGNAL PIN	
		+	-
DEVICE SELECT ENABLE	HOST	44	43
DEVICE SELECT 0/TAG BUS 10 (B10)	HOST	46	45
DEVICE SELECT 1	HOST	48	47
DEVICE SELECT 2	HOST	52	51
DEVICE SELECT 3 / TAG 5	HOST	54	53
TAG 1	HOST	2	1
TAG 2	HOST	4	3
TAG 3	HOST	6	5
TAG 4	HOST	60	59
TAG BUS 0 (B0)	HOST	8	7
TAG BUS 1 (B1)	HOST	10	9
TAG BUS 2 (B2)	HOST	12	11
TAG BUS 3 (B3)	HOST	14	13
TAG BUS 4 (B4)	HOST	16	15
TAG BUS 5 (B5)	HOST	18	17
TAG BUS 6 (B6)	HOST	20	19
TAG BUS 7 (B7)	HOST	22	21
TAG BUS 8 (B8)	HOST	24	23
TAG BUS 9 (B9)	HOST	26	25
INTERFACE ENABLE	HOST	28	27
STATUS 0 (UNIT READY)	DEVICE	38	37
STATUS 1 (ON CYLINDER)	DEVICE	34	33
STATUS 2 (SEEK ERROR)	DEVICE	32	31
STATUS 3 (FAULT)	DEVICE	30	29
STATUS 4 (WRITE PROTECTED)	DEVICE	56	55
STATUS 5 (ADDRESS MARK)	DEVICE	40	39
STATUS 6 (INDEX)	DEVICE	36	35
STATUS 7 (SECTOR)	DEVICE	50	49
BUSY	-	42	41
PICK	-		57
SEQUENCE	-		58

Uses BUS0 through BUS9, UNIT SELECT 0 & UNIT SELECT 1 with TAG1 to address up to 4096 cylinders. Has 4 disc status bytes selected by TAG4 and TAG5 (Modified Status Select).

8.5 Enhanced SMD Interface

TABLE 8-4 SMD ENHANCED CONTROL CABLE SIGNALS

SIGNAL NAME	SOURCE	SIGNAL PIN	
		+	-
DEVICE SELECT ENABLE	HOST	44	43
DEVICE SELECT 0	HOST	46	45
DEVICE SELECT 1	HOST	48	47
DEVICE SELECT 2	HOST	52	51
DEVICE SELECT 3	HOST	54	53
TAG 1	HOST	2	1
TAG 2	HOST	4	3
TAG 3	HOST	6	5
TAG BUS 0 (B0)	HOST	8	7
TAG BUS 1 (B1)	HOST	10	9
TAG BUS 2 (B2)	HOST	12	11
TAG BUS 3 (B3)	HOST	14	13
TAG BUS 4 (B4)	HOST	16	15
TAG BUS 5 (B5)	HOST	18	17
TAG BUS 6 (B6)	HOST	20	19
TAG BUS 7 (B7)	HOST	22	21
TAG BUS 8 (B8)	HOST	24	23
TAG BUS 9 (B9)	HOST	26	25
TAG BUS 10 (B10)	HOST	60	59
INTERFACE ENABLE	HOST	28	27
STATUS 0 (UNIT READY)	DEVICE	38	37
STATUS 1 (ON CYLINDER)	DEVICE	34	33
STATUS 2 (SEEK ERROR)	DEVICE	32	31
STATUS 3 (FAULT)	DEVICE	30	29
STATUS 4 (WRITE PROTECTED)	DEVICE	56	55
STATUS 5 (ADDRESS MARK)	DEVICE	40	39
STATUS 6 (INDEX)	DEVICE	36	35
STATUS 7 (SECTOR)	DEVICE	50	49
BUSY	-	42	41
PICK	-		57
SEQUENCE	-		58

Defines a spare SMD line as BUS10 to allow addressing of up to 2048 cylinders (Spare signal pin numbers are 59 and 60). Has only one disc status byte.

8.6 SMD-E Interface

TABLE 8-5 SMD-E CONTROL CABLE SIGNALS

SIGNAL NAME	SOURCE	SIGNAL PIN	
		+	-
DEVICE SELECT ENABLE	HOST	44	43
DEVICE SELECT 0	HOST	46	45
DEVICE SELECT 1	HOST	48	47
DEVICE SELECT 2	HOST	52	51
DEVICE SELECT 3 / TAG 5	HOST	54	53
TAG 1	HOST	2	1
TAG 2	HOST	4	3
TAG 3	HOST	6	5
TAG 4	HOST	60	59
TAG BUS 0 (B0)	HOST	8	7
TAG BUS 1 (B1)	HOST	10	9
TAG BUS 2 (B2)	HOST	12	11
TAG BUS 3 (B3)	HOST	14	13
TAG BUS 4 (B4)	HOST	16	15
TAG BUS 5 (B5)	HOST	18	17
TAG BUS 6 (B6)	HOST	20	19
TAG BUS 7 (B7)	HOST	22	21
TAG BUS 8 (B8)	HOST	24	23
TAG BUS 9 (B9)	HOST	26	25
INTERFACE ENABLE	HOST	28	27
STATUS 0 (UNIT READY)	DEVICE	38	37
STATUS 1 (ON CYLINDER)	DEVICE	34	33
STATUS 2 (SEEK ERROR)	DEVICE	32	31
STATUS 3 (FAULT)	DEVICE	30	29
STATUS 4 (WRITE PROTECTED)	DEVICE	56	55
STATUS 5 (ADDRESS MARK)	DEVICE	40	39
STATUS 6 (INDEX)	DEVICE	36	35
STATUS 7 (SECTOR)	DEVICE	50	49
BUSY	-	42	41
PICK	-		57
SEQUENCE	-		58

Uses high order head select bits (BUS7 and BUS8) along with the standard cylinder address bits to address up to 4096 cylinders. Has 7 disc status bytes selected by TAG4, TAG5 and BUS0 and BUS1.

8.7 SMD Read/Write Cable Signals


The Read/Write cable is common to all of the SMD interface types. Pin assignments are shown below in Table 8-6.

TABLE 8-6 SMD READ/WRITE CABLE SIGNALS

SIGNAL NAME	SOURCE	SIGNAL PIN		
		+	-	GND
WRITE DATA	HOST	14	15	13
WRITE CLOCK	HOST	12	11	10
SERVO CLOCK	DEVICE	2	3	1
READ CLOCK	DEVICE	8	9	7
SELECTED	DEVICE	17	18	16
SEEK END	DEVICE	20	19	21
INDEX MARK	DEVICE	22	23	24
SECTOR MARK	DEVICE	26	25	
READ DATA	DEVICE	6	5	4

CHAPTER NINE

HARDWARE DESCRIPTION



Chapter 9 WQSMC Hardware Description

9.1 GENERAL DESCRIPTION

There are four major functional sections in the WQSMC :-

1. The microprogrammed sequencer combined with an 8-bit RALU, forms a high speed processor which performs the following functions :
 - (a) Implement the MSCP register pair - the Initialization and Polling (IP) Register and the Status and Address (SA) Register. Respond to accesses of these registers by the host CPU.
 - (b) When the Auto Boot option is enabled, respond to accesses of the first eight boot locations (17773000 - 17773016 or 17771000 - 17771016) and initiate the automatic bootstrap function.
 - (c) Generate Qbus interrupt requests and control the vector transfer phase of the interrupt cycle.
 - (d) Generate Qbus DMA requests and control the transfer of data between cache memory and Qbus main memory. Use block mode DMA transfers if the main memory will support them, otherwise use conventional burst mode DMA. During DMA transfers, detect memory parity and timeout errors.
 - (e) During disc read/write operations, control the transfer of data between the disc FIFO buffer, (contained within the 8466 controller chip) and the cache memory.
 - (f) Implement a microprocessor-like instruction and register set. Fetch and execute these instructions from an on-board EPROM. This EPROM contains firmware modules which provide an ODT style debug, a set of disc formatting, testing and bad block management functions, and the high level MSCP protocol implementation.
2. The Qbus interface, which contains the necessary logic to support Data In (DIN), Data Out (DOUT), and Read Modify Write (DATIO) bus cycles from the host CPU. It also supports Interrupt Request cycles, DMA Request cycles and DMA transfer cycles with 22-bit addressing in both block mode and burst mode protocols.

3. The SMD disc interface. Disc read, write and formatting functions are performed by the 8466 controller chip. Seek, head select, and drive select functions are performed by extra logic.
4. The cache memory. The WQSMD uses 36 256K rams to implement 1M byte of storage for use as a disc cache. This memory is parity protected at the byte level. Circuitry is provided to refresh the memory every 3.3 mS.

9.2 DETAILED DESCRIPTION

Microprogrammed sequencer

The sequencer consists mainly of a set of eight 1K registered PROMS which store a set of microcode routines which perform specific functions. Execution of a microcode routine is initiated by the P PROM at Y5. The inputs of the P PROM are connected to various system states such that it can recognise when a particular routine should be executed.

The outputs of the P PROM are connected to the Next Address bus of the sequencer, uA1-uA8, so that when the appropriate input conditions arise the P PROM will assert the starting address of the desired routine to be executed. On the next system clock edge (SYSCLK), the P PROM will be disabled and the Next Address PROM (N PROM) will be enabled by the TRAP signal. The N PROM at X5 has its inputs and outputs connected to the Next Address bus, allowing it to use the current address on this bus to determine what the next address should be.

This new address is placed on the Next Address bus on the next SYSCLK edge, thus entering the second step of the routine. On each SYSCLK edge, the N PROM provides the address of each successive step of the routine being executed. At the end of the routine the TRAP signal is asserted, returning control of the Next Address bus to the P PROM. The least significant bit of the Next Address bus, uA0, can be made to assume the state of any one of the 22 system signals connected to the three 8-input multiplexers at W4, W6, Y4. The sequencer controls these multiplexers via the B PROM at W5, so that at any step in a routine the next address will be conditionally odd or even depending on the state of the selected input. This mechanism allows the sequencer to make decisions based on various system states, and to take the appropriate action.

Seven other PROMS - the A,F,S,C,M,L, and E PROMS - are connected to the Next Address bus, each producing eight output signals which control the rest of the logic on the board. One of these signals, uA9, from the C PROM forms the most significant bit of the Next Address bus, and can be viewed as an extension of the N PROM. If

there are no pending requests at the input of the P PROM the sequencer enters an instruction fetch routine. This routine places the contents of a program counter, stored in the RALU, into the address latch made up of the five 74LS191 counters at H5, K6, H6, J6, G6. The output of this latch addresses the U.V. erasable firmware PROM (EPROM) at K5. The sequencer then asserts the uREAD signal, followed by the FETCH signal, which places the output of the EPROM onto the Next Address bus via the octal latch at S4. This starts up a microcode routine which performs the function specified by the value fetched from the EPROM; thus executing the instruction.

The 8-bit Register and Arithmetic Logic Unit (RALU) made up of the two 2901C bit slice chips at N4, R4 performs all data manipulation functions and stores the "microprocessor" register set.

Qbus Interface

Data and address information is transferred between the WQSMD and the Qbus via the 2908 bus transceivers M8, N8, P8, R8. The 2908s at P6 and S8 drive the high order address lines during Qbus DMA, giving full 22-bit addressing capability. Incoming 16-bit data appear on DAL0-DAL15, and are multiplexed onto the internal 16 bit data bus (DB0 - DB15) via the 81LS95 octal buffers at L7, L8.

Incoming addresses also appear on DAL0 - DAL15 and are decoded by the WPROM at M6. This PROM produces eight outputs, six of which correspond to the six base address options of the WQSMD. The other two outputs provide the two bootstrap address options (17773000, 17771000). The address and boot option links select the appropriate outputs from the W PROM to be input to the P PROM via address latch X6 and synchronising latch Y6. These inputs along with DAL1, and RDIN provide the P PROM with sufficient information to initiate the appropriate microcode routine to service the Qbus request.

16-bit data to be transferred to the Qbus are loaded into latches in the 2908 bus transceivers from the 16-bit data bus DB0 - DB15, under the control of microcode signals LDBRL/ and LDBRM/. Outgoing addresses are loaded in a similar manner, with the high order 6 bits being loaded by LDBRH/. When the bus transceivers have been loaded with the appropriate information, the bus drivers are enabled by signals BUSEN/ and BUSENH/.

To generate an interrupt request to the host CPU, the microcode asserts DEVIRQ/. This asserts BIRQ4L on the Qbus, and depending on the configuration of the interrupt priority links P1, P2, P3, may also assert BIRQ5L, BIRQ6L, and/or BIRQ7L. The host responds with BDINL followed by BIACKIL, which, provided that no higher priority device is requesting an interrupt, will cause the INTR signal at pin 6 of W7 to be asserted. This connects to the P PROM via Y6 and causes the interrupt vector transfer microcode routine to be executed.

The microcode initiates DMA transfers by asserting the DMR signal which asserts BDMRL on the Qbus. The host responds with BDMGIL which asserts the DMAGR signal on pin 6 of V7. This signal is connected to the P PROM and initiates the DMA transfer routine in the microcode. This routine asserts TSACK to become Qbus master, then proceeds to transfer data over the Qbus using the block mode protocol, provided this is supported by the main memory as indicated by the BREFL signal. Otherwise, burst mode DMA is used.

SMD Interface

The 8466 disc controller chip performs the basic read, write and formatting functions required of the WQSMD. During a read, it accepts serial NRZ data from the disc, converts it to 16 bit words and stores them in an on-chip 16 word FIFO for retrieval by the external logic. Conversely, during a write, it removes 16 bit words from the FIFO and converts them to serial NRZ data to be written to the disc. The chip also performs sector header recognition, CRC generation and checking (for headers) and ECC generation and checking (for data). The chip contains 64 internal registers which are made accessible to the WQSMD firmware, and allow programming of disc format parameters, ECC polynomials, and disc commands.

The SMD interface consists of a 26 way data cable, over which serial disc data and clock information is transmitted, and a 60 way control cable which carries disc command and status information. Command information to be transmitted to the drive is loaded into the two octal latches L3, M3. Three TAG bits are then used to strobe this data into the drive. TAG1 strobcs cylinder addresses, TAG2 strobcs head addresses and TAG3 enables control information such as READ GATE and WRITE GATE. UNIT SELECT TAG selects the drive indicated by the UNIT SELECT bits.

Status information from the drive is received by P1, R1, and gated directly onto the 8 bit bus by the STAT2 signal. Some drives provide three more status bytes on these lines as selected by combinations of the TAG4 and TAG5 signals. This applies to MODIFIED SMD interfaces only. Drives with the EXTENDED SMD interface provide extra status bytes which are selected by UNIT SELECT bits, and TAG4 together.

All signals on the SMD interface (except PICK and HOLD) are differential negative polarity signals which must be terminated by the 56 ohm and 82 ohm S.I.P. resistor packs. Incoming signals are connected to the 3486 differential receiver chips which have tri-state TTL outputs. Outgoing signals are driven by the 3453 differential drivers. These require a -5 volt supply to produce the negative polarity signals of the SMD interface. This is provided by a voltage inverter circuit which converts +12 volts from the Qbus backplane to regulated -5 volts.

Cache Memory

An array of thirty six 256K dynamic RAM chips forms a one megabyte parity protected memory which is used as a disc cache. The array is arranged as two banks of 18 chips with 128K 16-bit words (and two parity bits) in each bank.

The array is addressed by the same address latch that addresses the firmware PROM mentioned above. 18 of these address bits are multiplexed by G5, F5, and E2 to form XA0 - XA8 which become the row and column address inputs for the array. Row addresses are strobed into the array by DRAS0/ or DRAS1/ depending on the state of the high order address bit A18. This provides a bank select function. Column addresses are strobed by DCASHI/ and DCASLO/. These two signals are used together to access a word, or individually to access the hi or lo byte only.

There is a parity bit assigned for each byte of data in the array. During a write cycle, parity information is generated by the two 74S280s at K7, K8, and written into the parity chips E5, E7, (low bank) or E6, E8, (hi bank). Odd parity is used. During a read cycle, the same chips, K7, K8, check the parity bits and assert CPERR if an error is detected. If the WWP/ signal is asserted, wrong parity will be written into the array on all subsequent write cycles. This provides a diagnostic aid for testing the parity logic.

Dynamic RAMs require that 256 row addresses be refreshed every 4 mS. The 14 bit divider chip at V4 generates a refresh request every 12.8 uS by causing the REFR signal to be asserted at pin 6 of T3. This causes the sequencer to refresh one row address which is derived from the low order 8 bits of V4. By refreshing a row address every 12.8 uS, all 256 row addresses are refreshed in 3.3 mS.

I/O Port

The I/O port serves two main functions. When running WOMBAT it can serve as an RS232 port to an ASCII terminal. This function is enabled by grounding the RS232 ENABLE/ input. The SERIAL signal from S3 pin 5 drives the base of the 2N4356 transistor, which produces the necessary +-5V swing at its collector to drive the RS232 output. The RS232 IN signal is clipped by a zener diode and then received by the octal buffer at V2.

The two TTL signals ACCESS0/ and ACCESS1/ indicate disc activity on drive 0 and 1 respectively. These signals are connected to the two on-board green LEDs and can be used to operate remote indicator lamps via appropriate driver circuits. The two signals ONLINE0/ and ONLINE1/ can be externally grounded to prevent access to drive 0 and 1 respectively.

When not running WOMBAT the RS232 IN/ and RS232 ENABLE/ signals can be externally grounded to write protect drive 0 and 1 respectively.


CHAPTER TEN

CIRCUIT DIAGRAMS




Chapter 10
WQSMD Circuit Diagrams

The circuit diagrams for the WQSMD Disc Controller may be found in the following pages.

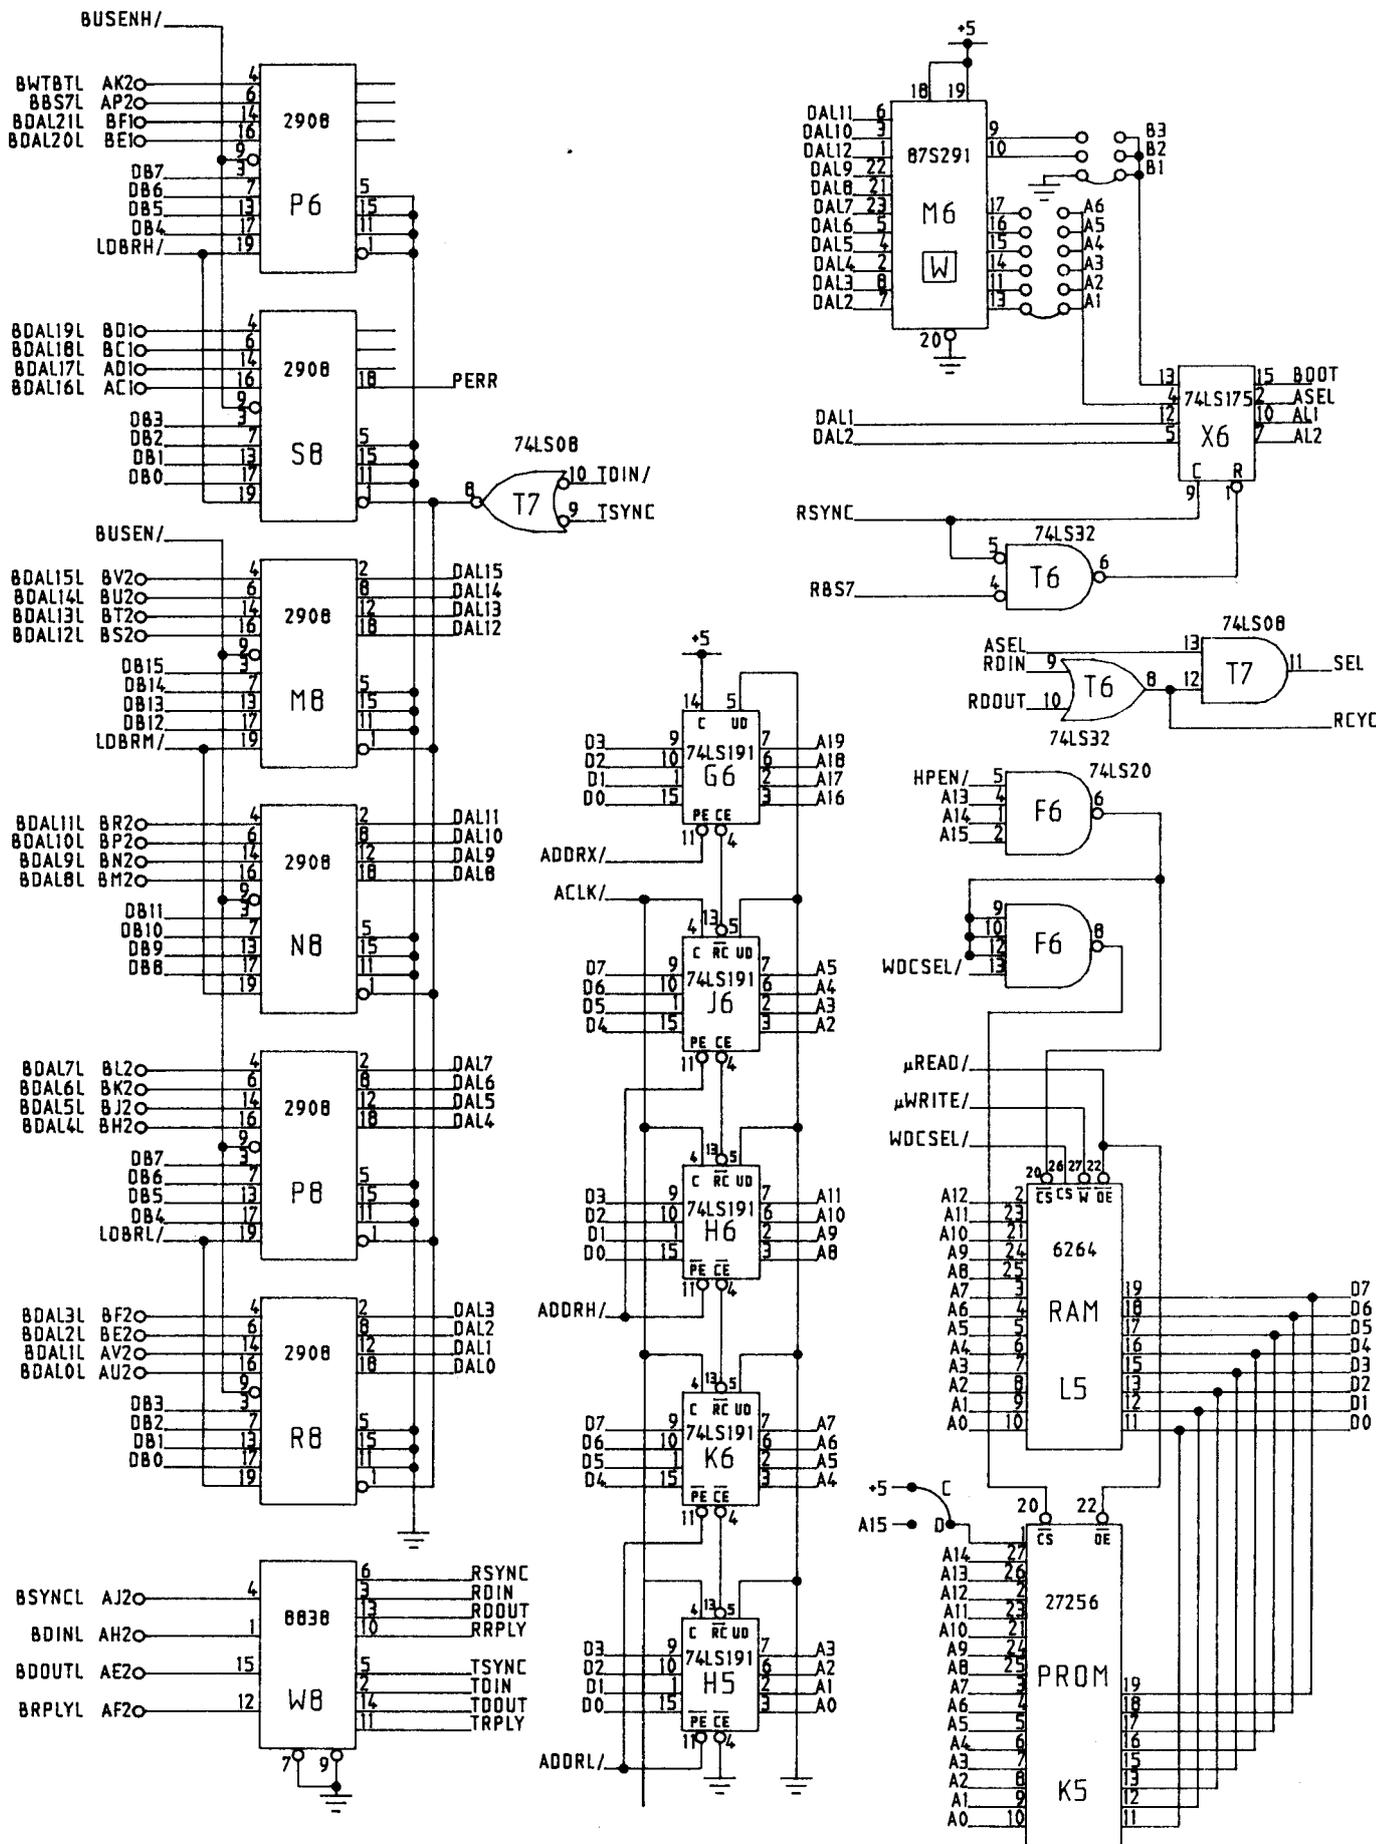







WEBSTER
COMPUTER
CORPORATION

WQSM
DISC CONTROLLER
SHEET 1 OF 7

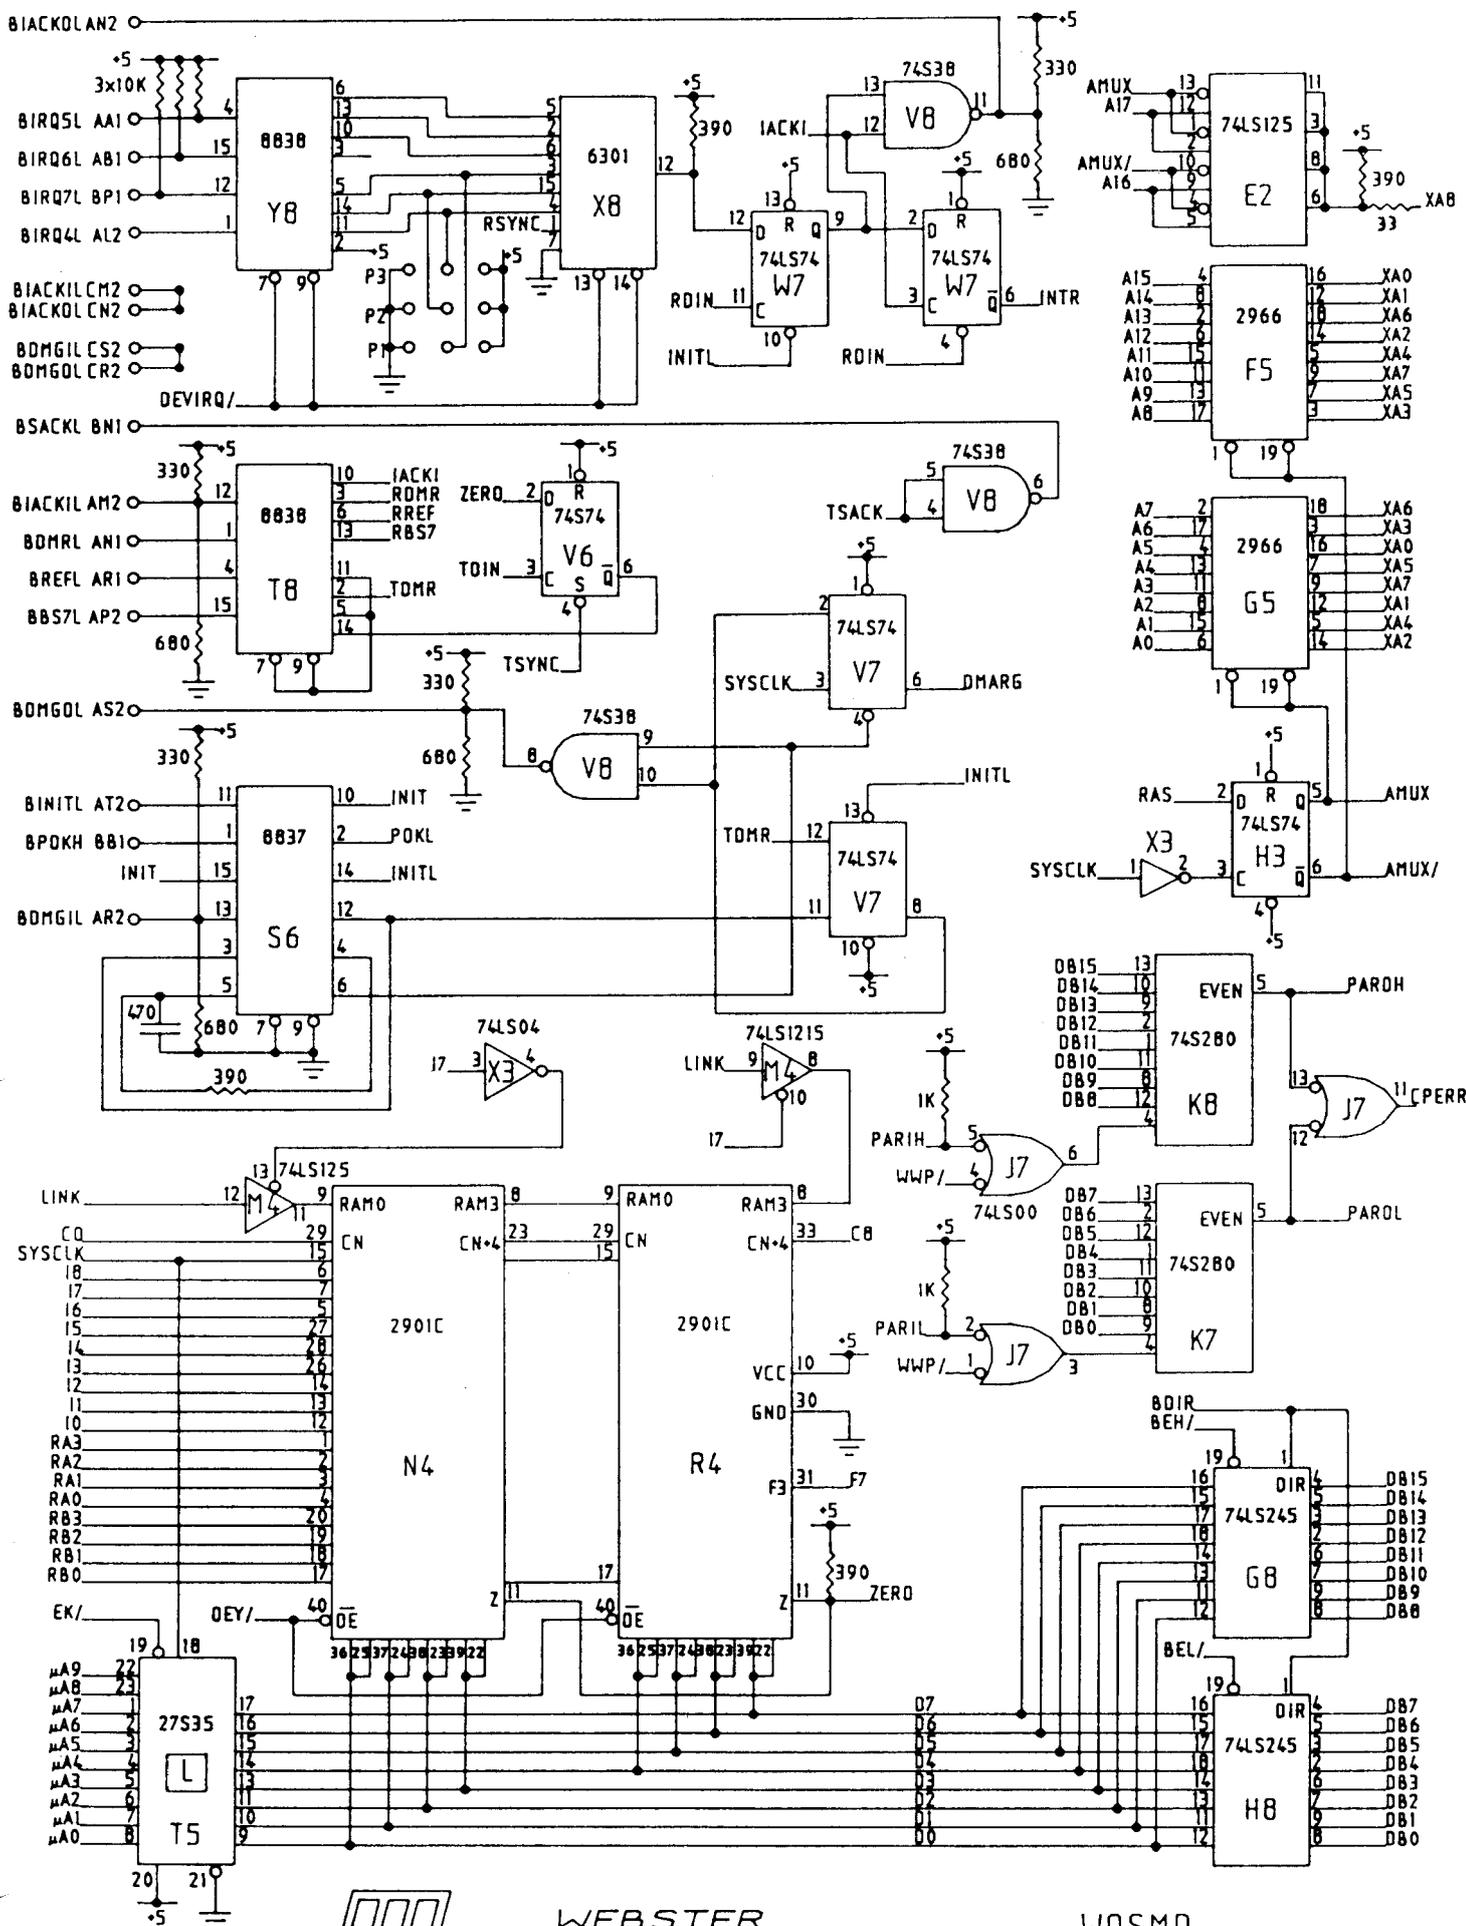


WEBSTER
COMPUTER
CORPORATION

WQSD
DISC CONTROLLER
SHEET 3 OF 7

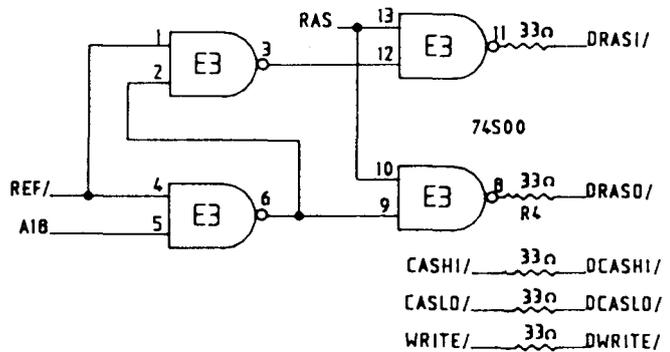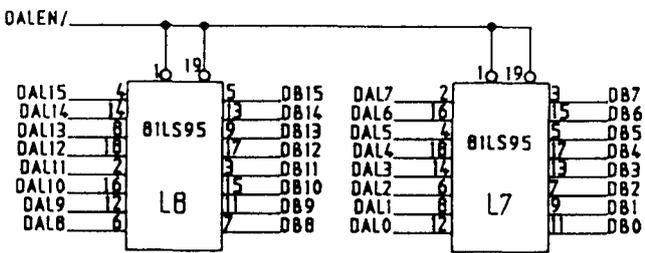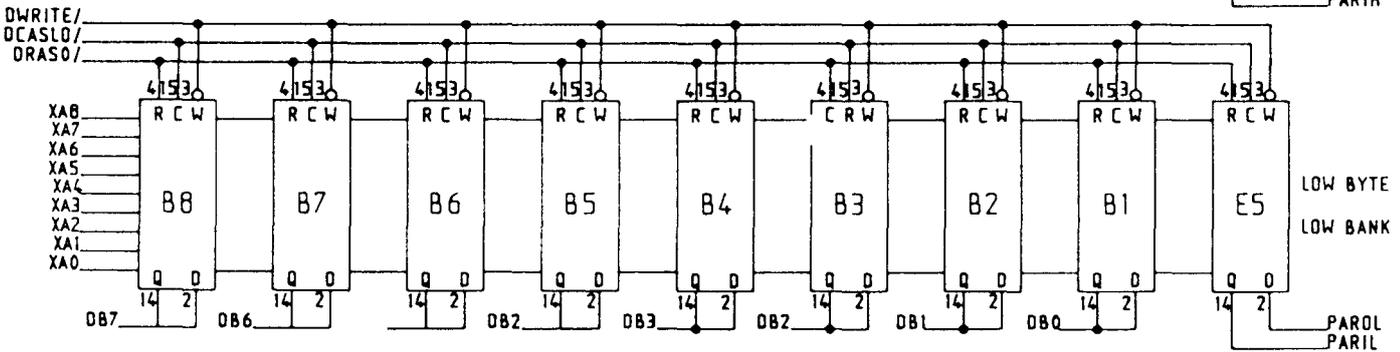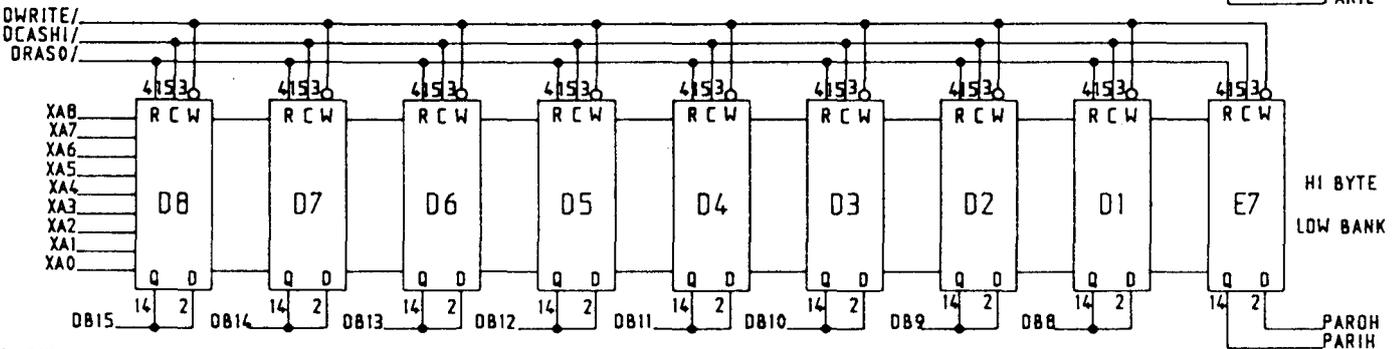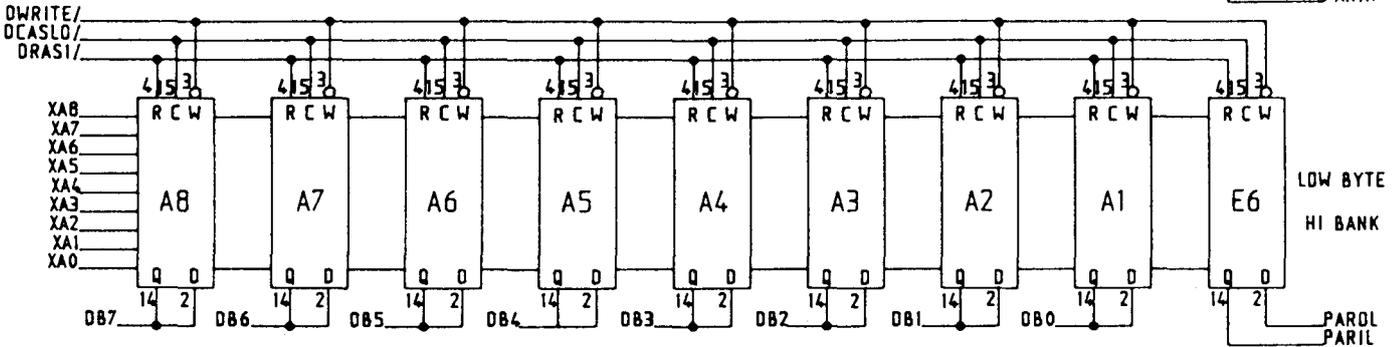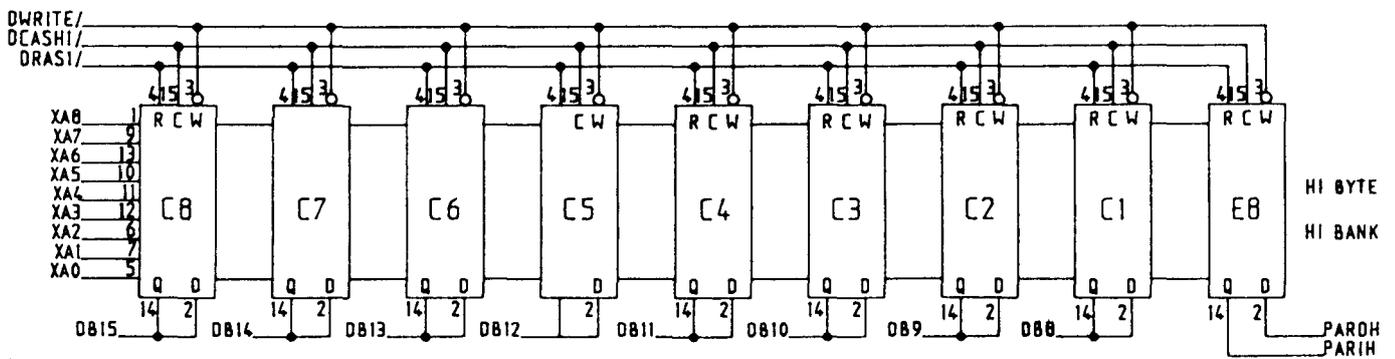

WEBSTER
COMPUTER
CORPORATION



WQSM
DISC CONTROLLER
SHEET 4 OF 7

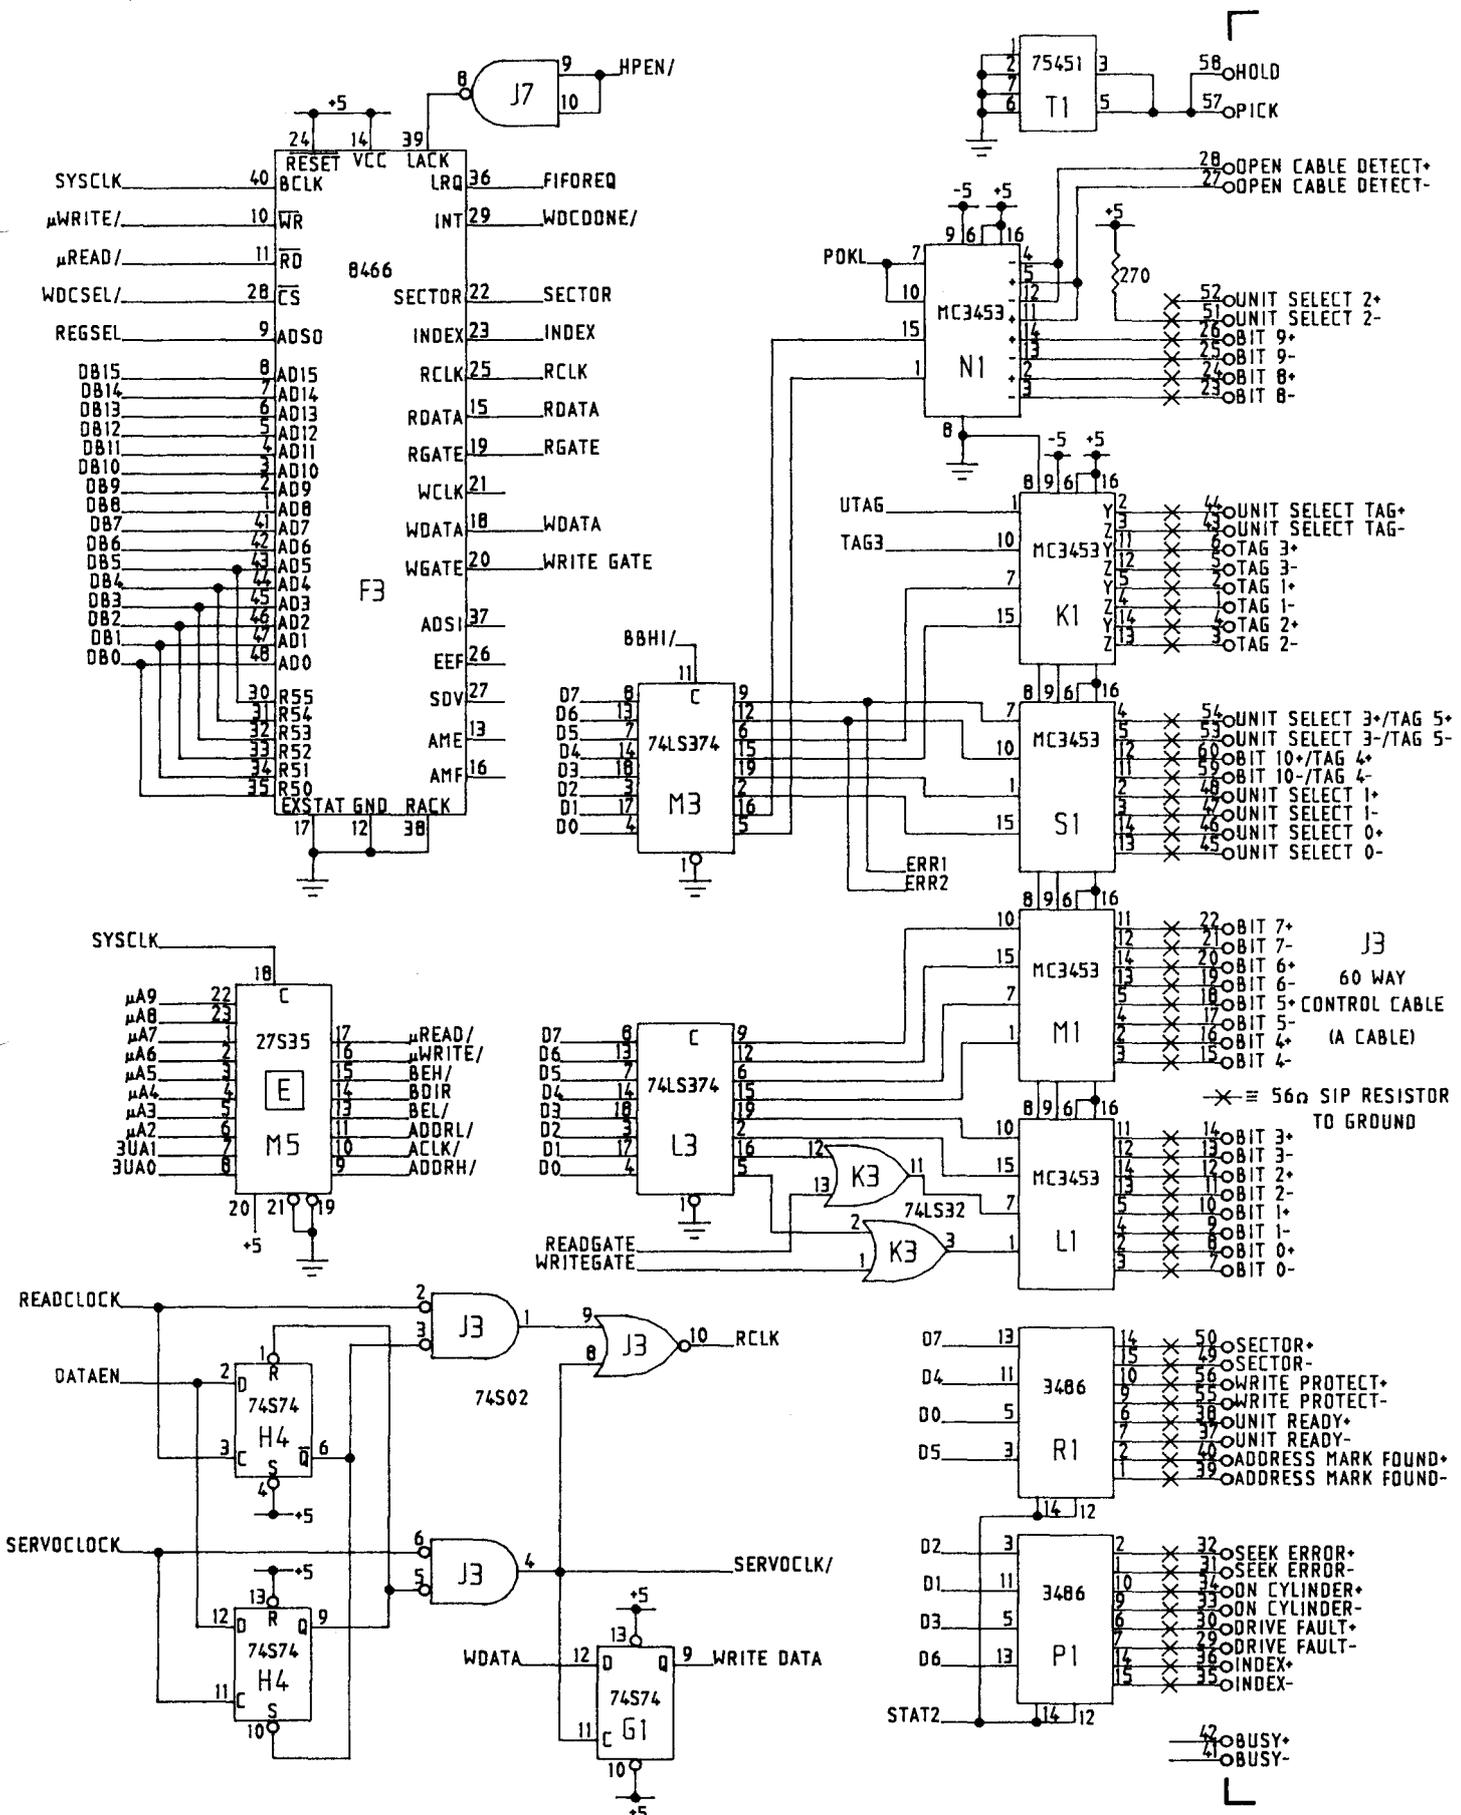

WEBSTER
COMPUTER
CORPORATION

WQSD
DISC CONTROLLER

SHEET 5 OF 7

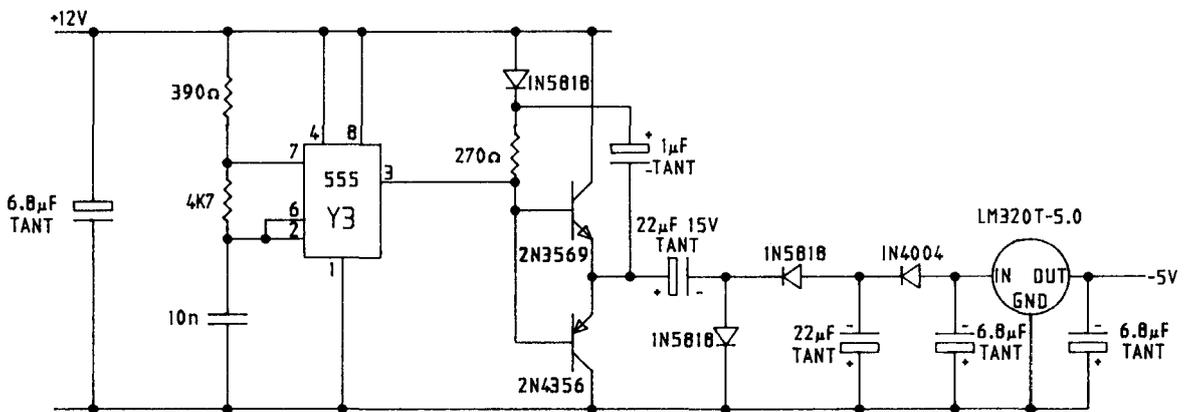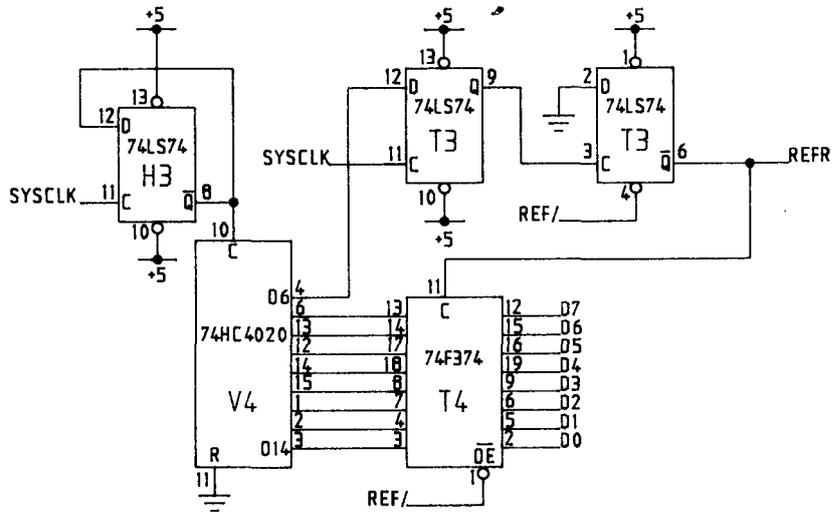


WESTERN
COMPUTER
CORPORATION

WQSMO
DISC CONTROLLER

SHEET 7 OF 7

APPENDIX A



Appendix A
Sample Switch Settings

Fujitsu Drive Switch Settings for the Webster WQSMD Controller.

1. M2322 8 inch 160 Megabyte drive.

Switch settings on logic PCB:

SW1	1	Off)
	2	Off)Drive 0
	3	Off)
	4	On	Drive type M2322
	5	Off	Disable Tag 4/5
	6	Off	Hard sector mode
	7	Off	Write enabled
	8	Off	Horizontal or vertical mount

Set up bytes per sector as $596+1 = 597$, plus one short sector of 182 bytes.

			Number of Bytes
SW2	1	Off	-
	2	Off	-
	3	On	4
	4	Off	-
	5	On	16
	6	Off	-
	7	On	64
SW3	1	Off	-
	2	Off	-
	3	On	512
	4	Off	-
	5	Off	-
	6	Off	-
	7	Off	-

M2322 Wombat Parameters

These are used in the 'Create Disc Structure' option.

823 cylinders
10 heads
34 sectors per track
1 short sector
Standard SMD interface
Spiralling factor = 4

2. M2333 8 inch 337 Megabyte drive.

Switch settings on logic PCB:

SW1	1	Off)
	2	Off)Drive 0
	3	Off)
	4	Off	
	5	On	Drive type M2333
	6	On	
	7	On	
	8	Off	Tag4/5 disabled
	9	Off	Write enabled
	10	Off	Horizontal mount

Set up bytes per sector as $594 + 2 = 596$, plus one short sector of 423 bytes.

			Number of Bytes
SW2	1	Off	-
	2	On	4
	3	Off	-
	4	On	16
	5	Off	-
	6	On	64
	7	Off	-
SW3	1	Off	-
	2	On	512
	3	Off	-
	4	Off	-
	5	Off	-
	6	Off	-
	7	Off	-

M2333 Wombat Parameters

These are used in the 'Create Disc Structure' option.

823 cylinders
10 heads
68 sectors per track
1 short sector
Standard SMD interface
Spiralling factor = 10

3. M2351A Eagle 490 Megabyte drive.

Jumper plug settings on logic PCB:

LOCATION AE7	3 - 4	Disable Tag4/5
	6 - 7	Enable SEEKEND after offset command reset
	10 - 11	Disable ready on drive fault

Set up bytes per sector as $595 + 1 = 596$, plus one short sector of 148 bytes.

Jumper the following:

		Number of Bytes
LOCATION BC7	3 - 4	-
	6 - 7	-
	9 - 10	4
	13 - 14	-
LOCATION BD7	2 - 3	16
	6 - 7	-
	9 - 10	64
	13 - 14	-
LOCATION BE7	3 - 4	-
	5 - 6	512
	10 - 11	-
	13 - 14	-
LOCATION BF7	3 - 4	-
	6 - 7	-
	10 - 11	-
	13 - 14	-

Switch settings on interface PCB:

SW1	1	Off)
	2	Off)Drive 0
	3	Off)
	4	Off	Not used

M2351 Wombat Parameters

These are used in the 'Create Disc Structure' option.

842 cylinders
20 heads
47 sectors per track
1 short sector
Standard SMD interface
Spiralling factor = 6

4. M2361A Super Eagle 689 Megabyte drive.

BE SURE TO SET INPUT VOLTAGE CONNECTOR TO THE CORRECT VOLTAGE.

Display Panel Settings:

REMOTE/LOCAL	LOCAL (Spin up on power on)
ENABLE/DISABLE A	ENABLE (Enable Channel A)
ENABLE/DISABLE B	DISABLE (single port) ENABLE (dual port)
RLTM/ABSL	ONLY RELEVANT IF DUAL PORT OPTION FITTED
RTZ	MAINTENANCE AID (Manual Return To Zero)
STATE INDICATOR	ST2 (Not critical...Allows user to select state output on display)

Set up bytes per sector as $595 + 1 = 596$, plus one short sector of 500 bytes.

Number Of Bytes

Switch B:	1	Off	-
	2	Off	-
	3	Off	-
	4	Off	-
	5	Off	-
	6	Off	-
	7	On	512
	8	Off	-
Switch A:	1	Off	-
	2	On	64
	3	Off	-
	4	On	16
	5	Off	-
	6	On	4
	7	Off	-
	8	Off	-
Drive Address:	1	Off	Not used
	2	Off)
	3	Off) Drive 0
	4	Off)

M2361 Wombat Parameters

These are used in the 'Create Disc Structure' option.

842 cylinders
20 heads
68 sectors per track
1 short sector
Standard SMD interface
Spiralling factor = 10

